



KODAK Charmera

Keychain Digital Camera

Quick Start Guide



Know Your Charmera

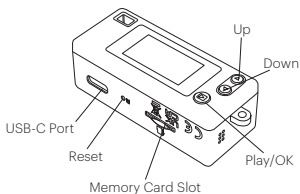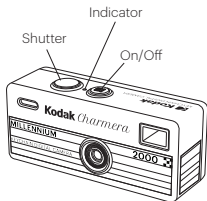

Product Features

- Support photo-taking and video recording
- 4 frames and 7 filters available in photo mode
- 1440 x 1080 image output; 1.6M megapixels
- 1GB-128GB TF memory card
- Rechargeable battery

Product Specifications

Image sensor: $\frac{1}{4}$ inch CMOS

Lens: 35mm; f/2.4

Plug: USB-C

Storage: Micro SD (1GB-128GB)

Image output: 1440 x 1080; 1.6M Megapixels

Image: JPEG

Frame rate: 30 fps

Video format: AVI

Battery: Rechargeable 200mAh

User level: Age 15+

Dimensions: 58(W) x 24.5(H) x 20(D) mm

Weight: 30(g)

Material: ABS

Charging

- 1 Please charge the device before use for the first time. You can charge by connecting to a charger, a computer or a power bank.
- 2 The Indicator will turn red when charging. The Indicator will be turned off when charging is completed.
- 3 When battery is low, the device cannot be turned on. Please charge it before use. The device cannot be used when charging.

Power On/Off

- 1 Power on: Long press the On/Off button  for 3 seconds to turn on the device. The Indicator will turn blue.
- 2 Power off: Long press the On/Off button  for 2 seconds to turn off the device. The Indicator light will be off.

Taking Photos

- 1 After inserting the memory card, select the photo icon  on the left-hand side of the screen, press the Play button  to enter the photo mode.
- 2 Press the Up or Down button  to select different photo filters or frames.
- 3 Press the Shutter  to take photos. The flashlight will flash, and the shutter sound indicates that a photo is taken.
- 4 Please keep the camera steady when taking photos.
- 5 The upper right corner of the screen shows the remaining number of photos that can be taken.

Recording Videos

- 1 Press the On/Off button  and select the video icon  in the middle. Press the Play button  to enter the video mode.
- 2 Press the Shutter  to start recording. Press the Shutter  again to stop recording.
- 3 The video is automatically saved in the memory card, and the device will re-enter the video mode.

Filters and Frames

In the photo mode, press the Up or Down button  to select different photo filters or frames.



Filter
Cool Tone



Filter
Warm Tone



Filter
Black & White



Pixel Filter
Coral



Pixel Filter
Honey



Pixel Filter
Teal



Pixel Filter
Violet



Sticker Frame



TV Frame



Recording Frame



Video Player Frame

File Playback

- 1 In the photo or video mode, press the Play button  to the file playback mode.
- 2 Navigate the file by pressing the Up and Down button .
- 3 For video files, press the Shutter  to play or pause. When a video is paused, you cannot view other files by pressing the Up and Down button . Press the On/Off button  to return to the file playback mode.

***Note:** Memory card is not included in the package. Without a memory card, you can still take and playback 2 photos. However, they will not be saved when a memory card is inserted after that. Video cannot be recorded without a memory card.

Setting Date & Time

- 1 Press the On/Off button  and select the calendar icon  in the right-hand side. Press the Play button  to enter the setting.
- 2 Go to "SET DATE" and press OK  to set date. Highlight the year, month, day, hour and minute by pressing OK . Press the Up and Down button  to select the desired number.
- 3 To change the order in which the year, month and day are displayed, highlight the date format (YMD/DMY/MDY) by pressing the Up and Down button . Press OK  to confirm. The selected display format will be highlighted in red.
- 4 Press OK  to turn on/off the date stamp for the photo and video mode.
- 5 When the date stamp is turned on, the calendar icon  will appear on the left-hand side on the screen in the photo or video mode.
- 6 When the date stamp is turned on for the photo mode, date will be displayed on the photos. When the date stamp is turned on for the video mode, both date and time will be displayed on the videos.

Deleting Files

- 1 In the file playback mode, long press the Play button  for 2 seconds to bring up the option to delete files.
- 2 Press the Play button  again to delete the current file or all files.
- 3 Then, press the Play button  again to cancel or execute the deletion.
- 4 Press the On/Off button  to return to the file playback mode

Language Setting

In the photo mode, long press the Down button  for 3 seconds to change to the next language. The current language setting is shown at the top right hand corner of the screen. Language sequence as follows:



Automatic Shutdown

In the following cases, the device will shut down automatically:

- 1 Power is insufficient when recording, the system will save the video content before shutting down automatically.
- 2 In the standby mode without any operation for 3 minutes, the system will shut down automatically.

Reset

When the device is dead or frozen for unknown reasons, you can insert a pin through the Reset Hole and press it for a short time to complete the reset, and then power the device for normal use. Reasons for crash are mainly frequent improper operations or issues with the memory card.

Connecting to Computer

After inserting the TF card into the device and connecting the device to the computer, it can be used directly as a USB disk. The computer will pop up the removable disk logo after a few seconds, and then you can edit the files in the TF card.

Connecting Camera to Android Phone via OTG

After connecting the camera to an Android phone with an OTG adapter* (not included in the package), you can preview, copy, and share photos and video files stored in the camera's memory card directly to the phone. The steps are as follows:

- 1 Connect the OTG adapter to an Android phone and the camera. The camera will automatically power on. An icon is displayed to indicate a successful OTG connection.
- 2 Open the file manager on your phone. You can find it in your app drawer. There will be a folder named "GENPLUS U Disk" or "USB storage" (the folder name may vary depending on the phone and system). Click on it to access the camera's memory card. Photos are in the "PHOTO" folder and videos are in the "VIDEO" folder.
- 3 The following issues may cause the phone to fail to recognize the camera:
 - a. Inserting an unformatted memory card into the camera may result in the phone not recognizing the card due to disorganized internal files.
 - b. When 64GB or more memory is used, the camera can be used normally but the OTG function recognition may be abnormal due to the incompatibility of some mobile phones.
 - c. Some phone brands require the OTG function to be enabled separately. If the camera is not recognized, check if the OTG function on your phone is turned on.

***Note: OTG adapter is not included in the package.**

Attention

1. Please read the Quick Start Card carefully and keep it for future use.
2. Please do not place the device near strong magnetic objects such as magnets and motors.
3. Please do not place the device near any objects that emit strong radio waves, as high magnetic fields may cause the device malfunction, or damage the images and sound.
4. It is recommended to use a high-quality TF card to save high-quality video files.
5. Please keep the TF card away from strong magnets to avoid data loss.
6. Keep the device out of the reach of children.
7. Do not pour any liquids on the device.
8. Do not try to repair the device by yourself. The device contains batteries, please do not dispose of the device in the trash. Choose an appropriate method of disposal.

Kodak *Charmera*



© 2026 RETO Production Ltd. All rights reserved.

The Kodak trademark, logo and trade dress are used under license from Eastman Kodak Company.