

MAX PRO



MANUAL
EVOLUTION STRAIGHTENER

ABOUT THE PRODUCT

Are you looking for a professional straightener for daily use that does as little damage to your hair as possible? Then the Max Pro Evolution Straightener is the perfect straightener for you!

The plates of the Evolution Straightener are made of 100% titanium and do not close completely, allowing the straightener to glide easily through any type of hair and providing optimal protection for your hair while straightening/curling. Because of its light weight, the Evolution is easy to use and much loved by professionals; hairdressers and hairstylists.

Result? Long-lasting style with a natural shine.

Available Colours: Black & Rose gold (Limited Edition)



DANGER

As with most electrical appliances, electrical parts are electrically live even when the switch is off.

To reduce the risk of death by electric shock:

1. Always unplug it immediately after using.
2. Do not use while bathing.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink
4. Do not place in or drop into water or other liquid
5. If an appliance falls into water, unplug it immediately. Do not reach into water.
6. Do not use if plug is loose in the outlet, as there may be risk of fire, electric shock, electrical shortage and burning.

WARNING

To reduce the risk of burns, electrocution, fire, or injury to persons:

1. Store out of reach of children in a safe dry location. Allow appliance to cool before storing.
2. An appliance should never be left unattended when plugged in.
3. Close supervision is necessary when this appliance is used by, on, or near children or individuals.
4. Use this appliance only for its intended use. Do not use attachments not recommended by the manufacturer.
5. Do not jerk or strain cord at plug connections.
6. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged, or dropped into water. Return the appliance to a service center for examination and repair.
7. Keep the cord away from heated surfaces. Do not wrap the cord around the appliance.
8. Keep heated surfaces clean and free from dust, dirt and hair spray. If cleaning becomes necessary, disconnect the appliance from the power source and wipe the exterior with a damp cloth.
9. Never use while sleeping.
10. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
11. Attachments may be hot during use. Allow them to cool before handling.
12. Do not place appliance on any surface while it is operating.
13. Do not use an extension cord with this appliance.
14. Do not operate with a voltage converter.

INSTRUCTIONS

- Always make sure that your hair is completely clean and dry before using straightener.
- Make sure there is no water on the floor or on other surfaces near the outlet or the hair styling tool.
- Insert the plug of the straightener into the outlet. The straightener could have a polarized plug, which has one pin which is wider than the other. If this is the case, this plug will only fit into an outlet when it is placed correctly. When the plug does not fit into an outlet, make sure that you have the large pin stabbed into the correct hole. If you cannot plug in the plug without any problems, please contact an electrician; never try to force stabbing the plug into an electrical outlet.
- Insert the plug of the styling tool into a socket and press the "ON/OFF" button on the inside of the handgrip until the temperature is shown on the display.
- The hair styling tool will become very hot immediately, but it will take about 40 seconds before it has an optimal uniform heat distribution.
- The hair styling tool becomes very hot, so make sure it does not make contact with the skin.
- Allow your hair to cool down before touching or brushing it.
- After styling your hair, switch off the hair styling tool by putting the switch on the inside to the "OFF" position, unplug the power cord and allow the hair styling tool to cool down completely on a heat-resistant surface before storing it. Never leave the styling tool in the outlet or turned on if you are not around.

WARRANTY

The warranty on this product is valid for two years from the date of purchase. To show our appreciation for your purchase and dedication to our products, we hereby offer to submit your warranty free to upgrade to a lifetime warranty!

To register for this exclusive warranty, please complete the registration form on our website www.maxprohair.com (NOTE: This can only be done within 30 days of purchase). Please keep your proof of purchase (receipt, order confirmation email) and the original box of your styling tool as proof of purchase. This warranty is only valid for straighteners/curling irons purchased from an authorized Max Pro retailer.

If your product fails to function properly due to a manufacturer's defect and the warranty conditions are met, your Max Pro styling tool will be repaired or replaced; this is determined by the manufacturer.

(!) This warranty does not apply to problems resulting from misuse, damage or normal wear and tear; the warranty is void if the product is used for commercial purposes. In addition, the warranty does not apply to styling tools that have been modified or repaired by an unauthorized Max Pro retailer or manufacturer.

For warranty questions, please contact our Customer Service or visit us at www.maxprohair.com. If the product does not function properly, we will require digital photos of the product, as well as a copy of your original proof of purchase. In case of replacement or repair, a payment is required to cover the shipping and handling costs (depending on where you live). Feel free to contact us if you have any questions or comments.

We are happy to help you!