

KiddyPad

ENGLISH

User Manual



Congratulations for buying KiddyPad!

Thank you very much for your trust and your decision to buy an EASYPIX product!

As we constantly update and improve KiddyPad there may be small differences between the printed manual and your KiddyPad in some cases. You have the option of downloading the current version of the manual and firmware updates for your KiddyPad from our website www.easypix.eu.



ENGLISH

Table of Contents

Safety instructions	3
Device overview	4
Description of the buttons	5
Language settings	6
Power monitoring and charging the batteries	7
Screen lock	7
Connecting with computer and data transfer	7
Functions of the buttons on the user interface	8
Programme menu	9
System settings	11
WiFi	11
Sound	13
Display	13
Storage	13
Apps	13
Accounts & sync	13
Location services	14
Security	14
Language & input	14
Backup & reset	14
Date & time	14
About tablet	14
Internet	15
Using the Kids Interface	17
Open Source Code & GNU General Public License	29
Technical Data	30



ENGLISH

This user manual contains important safety instructions and information for proper use of the device. Please follow the instructions in this manual carefully.

A Please keep the device away from places with high temperatures, high humidity or dust.

B In particular please avoid leaving the device in the car during summer if the doors are closed.

C Avoid shocks and do not let the device fall, as otherwise it may cause damage to the device.

D The Standby Time of the batteries may vary due to different environmental influences.

E We are not responsible for data losses that are caused by damage to the product, repairs or any other reasons.

F Do not open the housing of the device. Doing this will void your warranty claims.

G Do not use alcohol, thinners or petrol to clean the display – use only a dry cloth.

KiddyPad

ENGLISH

Device overview



1. Power button
2. Volume
3. Menu button
4. Earphones
5. CD-In
6. USB Port
7. Micro SD Card Slot



ENGLISH

Description of the buttons

Volume Buttons:

Here you can increase or reduce the volume.

Power Button:

Press the button for two seconds to switch on or switch off the device. Press the button briefly to activate or end the Standby-Mode. Reset: Press the button for seven seconds to restart the device.

ESC Button:

To go back to the previous menu

Menu Button:

To open the context menu

Home Button:


To go back to the user interface

 
KiddyPad

ENGLISH

Language setting

KiddyPad is delivered with English as a default language. To change the language setting, please do the following:

- Press on the programme menu symbol  on the right side of the screen

- Select 'Settings' 
- Scroll to the end of the list
- Select 'Language & input'
- Select 'Language'
- Type your preferred language
- Press the 'Home' button to return to the home screen

KiddyPad

ENGLISH

Power monitoring and charging the batteries

The battery charge symbol  in on the status bar indicates the charging status of the batteries.

If the power goes down, the device shuts itself off automatically. If less power is shown, use the power adapter to charge the device.

The charging time for the battery is approximately four hours.

Screen lock

If the device is not used for specified time or the 'Power' button is pressed briefly, the screen is switched off and display lock is activated.

By pressing the 'Power' button briefly the screen will be reactivated. For locking the screen press the 'Lock' button in the specified direction.

Connecting to the computer and data transfer

KiddyPad is equipped with a High-Speed USB2.0 Interface. After you connect the device to a computer, it appears in the status display



KiddyPad

ENGLISH

Functions of the buttons on the user interface:



Home Button:

To go back to the start screen.



Menu Button:

To open the context menu (not in all apps available).



Back Button:

To go back to the previous menu / previous page.



Program Menu Button:

To display the programs and applications.



WI-FI Signal Icon



System instruction (example)

KiddyPad

ENGLISH

Program menu



ApkInstaller:

Program for installing and uninstalling Apps that were not downloaded from the Android Market.



Market / Play Store:

Load Apps (programs) from the Android Market. You can download and install apps, games and other applications. Many are free.



Explorer:

Open the Explorer to access Micro SD TF Cards, USB sticks and other storage media. The Explorer is a practical manager for documents and all types of data.



Internet browser



0.3MP camera



E-mail:

Program for retrieving, processing and sending e-mails.



Google Mail:

Program for retrieving, processing and sending e-mails through Google account.



Google Maps:

Program for the display of maps or satellite images – route planner.

KiddyPad

ENGLISH



Calendar:

Managing schedules – can be synchronised automatically with a Google account.



Pocket Calculator



Time:

Time display and setting alarm functions.



Settings:

Changing the basic settings of KiddyPads.



Sound Recorder:

Dictation Device Function.



Video Player



Gallery:

Manage and display images and videos – also enables synchronisation with Picasa web albums.



E-Book:

A program for reading and managing e-books.

KiddyPad

ENGLISH

 
System settings



Touch the icon for the settings to open the system settings menu:

Wi-Fi

Touch 'Wi-Fi'.

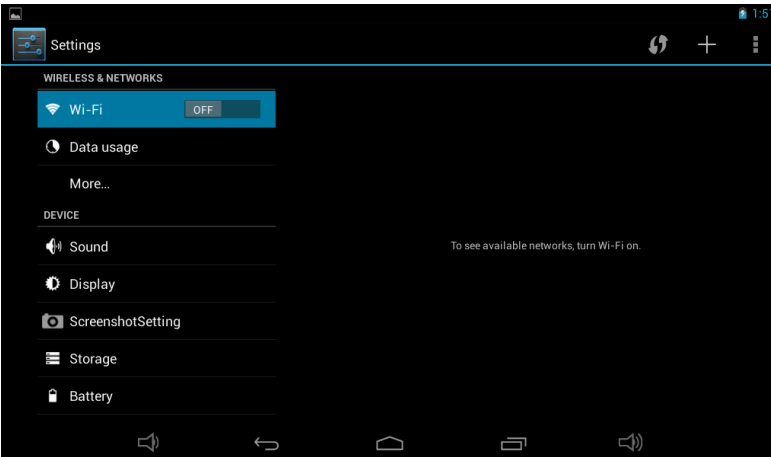

WI-FI: Touch  =>  to switch on the WI-FI function.

 
The device automatically searches for available WI-FI networks.

KiddyPad


ENGLISH

WI-FI Settings: Select your network here.

If needed you will be requested to enter your WI-FI password:

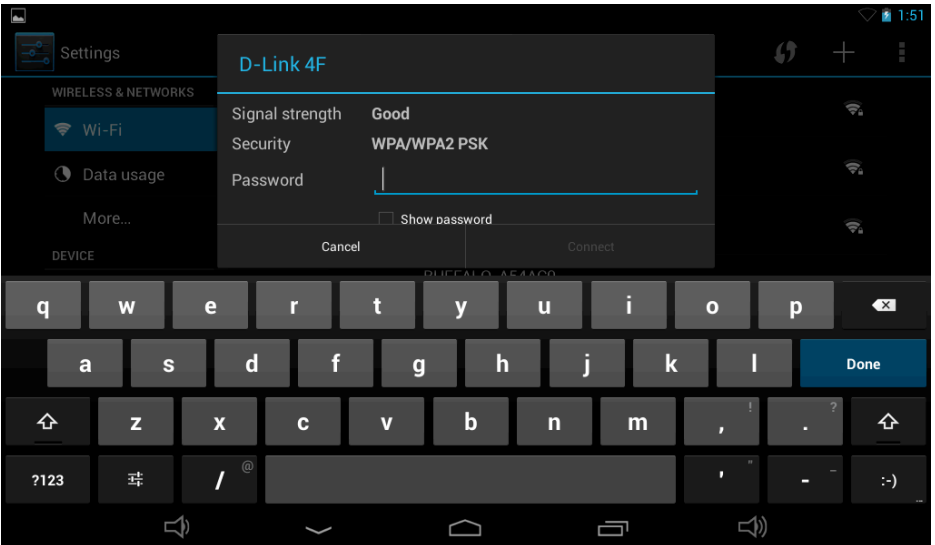

Advanced Wi-Fi settings:

Touch  in the menu for Wi-Fi Settings, the menu for advanced settings will open up automatically. In the menu for the advanced settings you can view the current status, the IP address and other device information.



ENGLISH

Sound

The 'Sound' settings contain the volume control, and selection of notification sounds, system sounds, signal tones for Micro SD/TF Cards and USB signal tone.

Display

Includes brightness, automatic screen rotation (G-sensor), animations and display timeout time, Switch off display after : 15 seconds, 30 seconds, 1 minute, 2 minutes, 10 minutes or 30 minutes are available. For example, if you select 30 seconds, the display will be switched after 30 seconds of inactivity and screen lock is activated. Press the 'Power' button to reactivate the Display. Push the 'Lock' button up to lift the screen lock.

Storage

Here the current memory use is displayed.

Touch 'Remove SD Card' to remove the Micro SD/TF Card during use.

Apps

Here you can manage your apps and define if apps from sources other than the Android Market are allowed to be installed.

Accounts & sync

General synchronisation settings:

1. Background data
2. Automatic synchronisation

Account management: Management of user accounts



ENGLISH

Location services

Here you can activate the automatic recognition of the location.

Security

You can also set security passwords which will prevent unauthorised access to your KiddyPad.

Language & input

Set the system language and input method.

Backup & reset

Secure my data: Here you can define if different settings should be stored on Google servers.

Touch 'Reset to default' to reset the device to factory settings. All settings, self-installed apps and data stored on internal memory can be deleted.

Date & time

If your network does not support automatic setting of time, you can set the time, time zone and date manually after deactivating automatic settings.

About tablet

Here you can view device internal values such as operating system version, battery status, signal strength of the mobile network etc.


KiddyPad

ENGLISH


Main functions

Internet



Touch  Icon to surf the net.
Easypix.eu is the default start page.
Touch the input field to display the keyboard.




Touch  after entering a website address to open the website.

 
Note: The Android keyboard has few options for settings such as: keyboard language, numbers and icons etc.

The Internet browser can open four websites simultaneously.

KiddyPad

ENGLISH

Touch  and the menu will be displayed as follows:

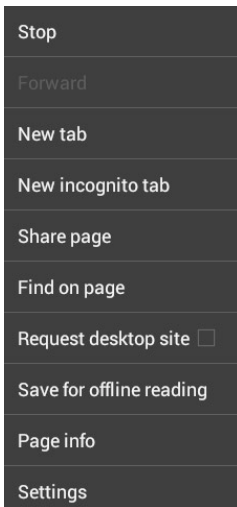

KiddyPad

ENGLISH

Kids Interface



 
Kids interface displays the applications assigned by parents, on the top of the screen, it shows Wifi, battery life, kid's avatar and nickname etc, on the bottom of the screen, it shows the Personalized Favorites, kids can keep the preferred applications inside, which can hide or pop up by click or drag-and-drop.

Remark: The infrared distance sensor will darken in kids interface to remind keeping right distance with the screen to protect kid's eyesight.

KiddyPad

ENGLISH

- **Children set**

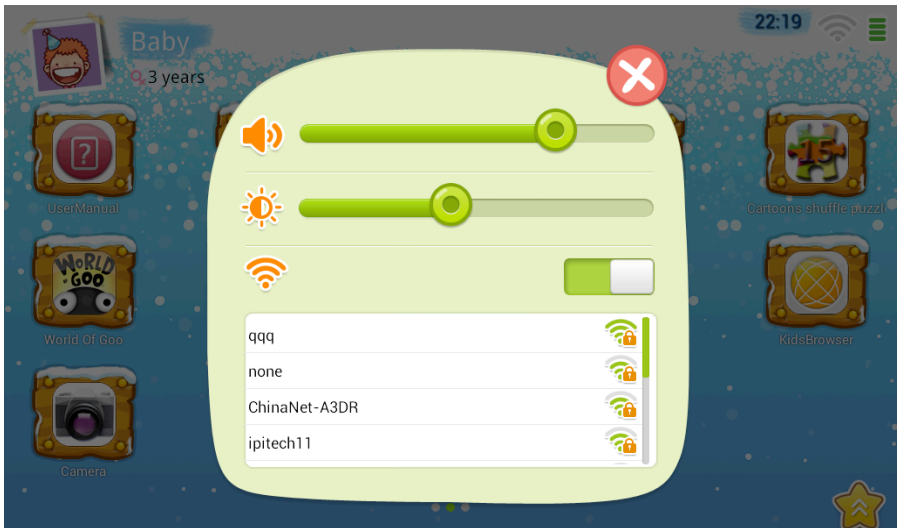

Click "Children set" in the kids interface to enter into the children settings interface, then you can adjust the volume, screen brightness and Wifi.

KiddyPad

ENGLISH

- **Kids Browser**



After adding the children's personalized browser into the kids interface, if parents set the browser to access all websites, children can search the preferred site. If parents set the specific websites, the children can click and visit the designated links only, which will be displayed below.

KiddyPad

ENGLISH

- **Theme**



Children can set their favorite themes. Click the “theme manager” for preview, click the Apply button to finish the setting.


KiddyPad

ENGLISH

- **Children Applications - Uninstall and Remove**



Press the application icon on the desktop for 1 or 2 sec. and then

 
click the black icon  to uninstall, accordingly it will also be uninstalled in the parents interface. If you want to remove it in the kids interface only, you can manage the applications in the parents setting.

KiddyPad

ENGLISH

Interface Switch

From Kids interface to Parents Interface: Press Menu button in Kids interface - a password window will pop up, enter the correct password and confirm "quit" to back into parents interface. (Default password is 0000.)

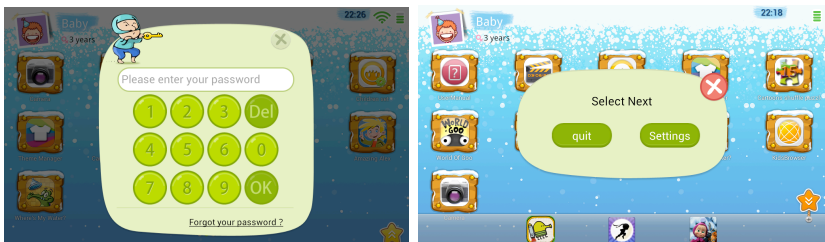

From Parents interface to Kids interface: Click "Launcher" in the parents interface to enter into Kids interface. Password: If you forgot your password, pls click "Forgot your password" in the password interface, and you will receive the password notice in your binding-email address.

Select "Settings" to enter Parents Settings;
Select "quit" to exit the Kid interface.

KiddyPad

ENGLISH

Parents Setting



KiddyPad

ENGLISH

- **User Manager**



User Manager

Name:

Sex: Boy Girl

Birthday:

2009	07	07
2010	08	08
2011	09	09

- Set the child's name, gender, birthday, etc.
- Set the authentication password with number or pattern mode
- Set the binding mailbox, through the email address, you can receive your password and play record of children.
- Set the language

KiddyPad

ENGLISH

- **Apps Manager**

 


Parents can assign or delete the entertainment or educational applications for children.

KiddyPad


ENGLISH

- **Monitoring Manager**

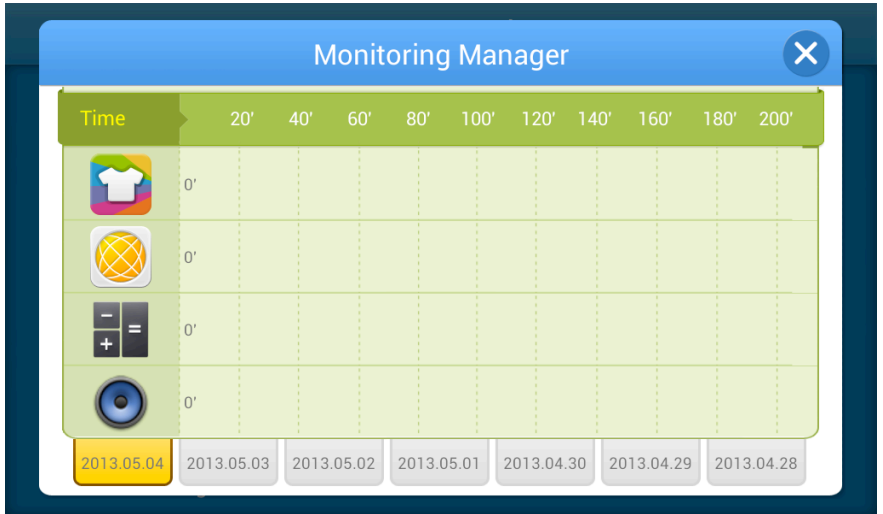


It can clearly show each application's usage record in the last seven days, convenient for parents to supervise their children activity on the tablet.

 - **Time Manager**

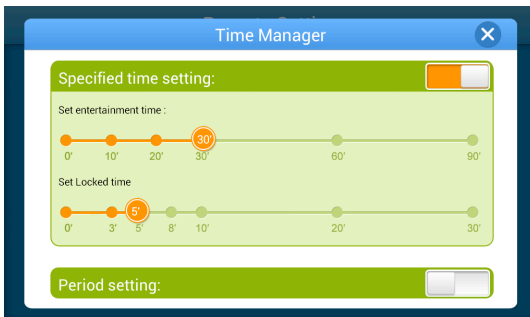

In Time manager parents can set the specified time and daily use time period.

 After the specified time is setted, it will automatically lock the screen. The screen can only be unlocked when the time's up or by password to make children have time to rest.

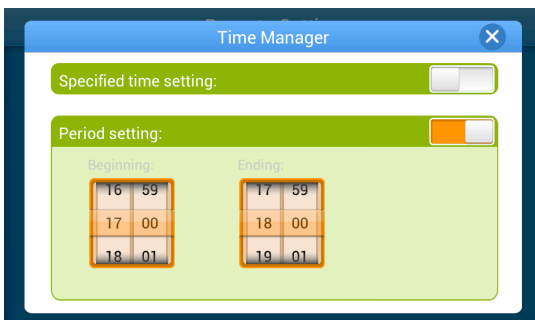


Period setting: Children use it only in the set period

KiddyPad

ENGLISH

 - **Browser Manager**

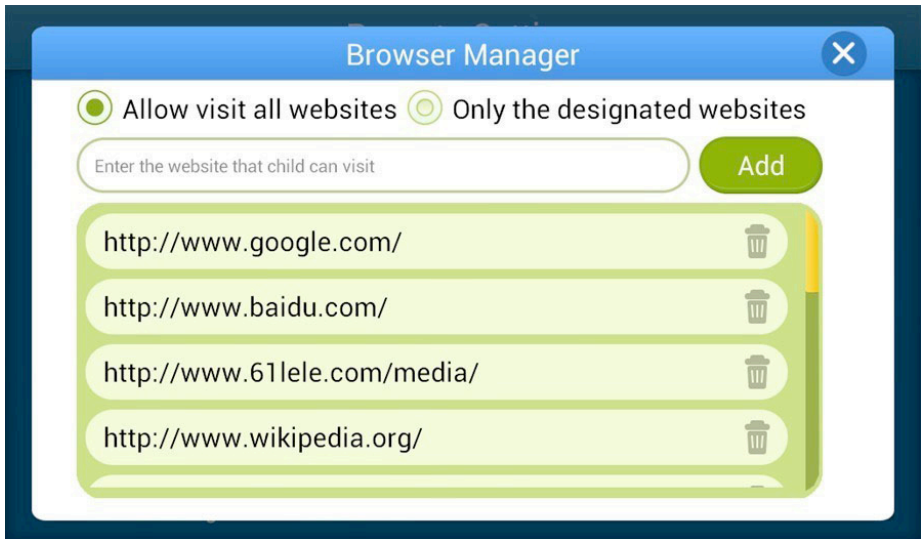

There are two ways available for the browser settings, allow access to all sites, or only the designated website.

- Allow access to all sites means children can access all website
- Only the designated website means children can only access the designated website defined by the parents, and the specific list of sites can be viewed or deleted in the list



ENGLISH

Open Source Code:

http://www.easypix.info/download/kiddypad/open_source.zip

GNU General Public License:

<http://www.gnu.org/licenses/gpl-2.0.html>

For technical help please visit our support area on www.easypix.eu.



ENGLISH

Technical Data

KiddyPad	7" / 17.7cm tablet PC
CPU	RK3168 1.2GHz Dual Core
Operating System	Android 4.2
RAM	1GB DDR3
Internal Memory	8GB NAND Flash
Memory Expansion	Micro SD cards up to 32GB
Display	16:9 Capacitive Multi-Touch-Display
Resolution	1024 x 600 Pixel
G-SENSOR	Yes
Camera	Front 0.3 MP, Back 2 MP
Battery	2600mAh rechargeable Li-ion Battery 5V/2A DC-In
WIFI	802.11b/g/n
I/O ports	1x DC In, 1x headphone, 1x Card-Slot, 1x USB 2.0



ENGLISH

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License, version 2, as published by the Free Software Foundation.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License, version 2, for more details.

You should have received a copy of the GNU General Public License, version 2, along with this program; if not, write to the Free Software Foundation, Inc., 51 Franklin St, Fifth Floor, Boston, MA 02110, USA

You should receive a complete machine-readable copy of the corresponding source code of this program under the following link: <http://www.easypix.eu/en/EasyPad-Download-Area>
if not, write to easypix GmbH, Corinne Loose, Em Parkveedel 11, D-50733 Cologne, Germany, e-mail: support@easypix.eu

KiddyPad

ENGLISH

Easypix hereby declares that the product KiddyPad is in conformity to all the essential requirements of Directive 1999/5/EC.

The declaration of conformity can be downloaded here:

http://www.easypix.info/download/kiddypad/doc_kiddypad.pdf

