




SIEMENS



Clothes dryer

WT47XM40

siemens-home.bsh-group.com/welcome

de

register
your
product
on-line

Your new clothes dryer

You have chosen a tumble dryer
Siemens brand decided.

Please take a few minutes to read and get to know the advantages of your tumble dryer.

In order to meet the high quality standards of the Siemens brand, every tumble dryer that leaves our factory has been carefully checked for function and perfect condition.

Further information on our products, accessories, spare parts and services can be found on our website www.siemens-home.bsh-group.com or contact our customer service centers.

If the operating and installation instructions describe different models, the differences will be pointed out at the appropriate places.



Do not start up the tumble dryer until you have read these operating and installation instructions!

Presentation rules

:Warning!

This combination of symbol and signal word indicates a possibly dangerous situation. Failure to observe can result in death or injury.

Caution!

This signal word indicates a possibly dangerous situation. Failure to observe can lead to property and / or environmental damage.

Note / tip

Notes on the optimal use of the device / useful information.

1. 2. 3. / a) b) c)

Action steps are represented by numbers or letters.

■ / -

Lists are represented by a box or a dash.

Table of Contents

8th Intended

Use.....4

(Safety instructions5

Children / people / pets. 5
 Installation..... 6
 Operation..... 8
 Cleaning / maintenance..... 10

7th savings tips.....12

5 Set up the device and connect12

Scope of delivery..... 12
 Setting up the device..... 12
 Connecting the device..... 14
 Before using for the first time..... 15
 Optional accessories..... 15th

9 Quick start Guide.....16

* Get to know the device.....17

Device overview..... 17
 aperture..... 18th

Y Display.....18

/Program overview.....21

O Settings23

Z Laundry25

Prepare laundry..... 25
 Sorting laundry..... 25th

1 Operate the device.....26

Switch on the device and
 Load laundry..... 26th
 Set the program..... 27
 Starting the program..... 27
 Program sequence..... 27
 Change program or
 Add laundry..... 27

Cancel the program.....28
 End of program.....28
 Remove laundry and
 Switch off the device.....28
 Empty the condensation container.....28

2 Device settings..... 29

Parental controls.....29
 Warning signal.....29
 Basic settings.....29

O Home Connect..... 31

Call up the Home Connect menu.....31
 Connect to the home network
 and the Home Connect app.....31
 Activate / deactivate Wi-Fi.....33
 Network settings
 reset to default.....34
 Software update.....34
 Energy management.....35
 Intelligent program recommendation.....36
 Remote diagnosis.....37
 Note on data protection.....37
 Declaration of Conformity.....37

D.Clean and maintain..... 38

To clean a device.....38
 Cleaning the bottom unit.....38
 Cleaning the moisture sensor.....41
 Clean the sieve in the condensation
 container.....41

Ö Device care..... 42

Prepare equipment care.....42
 Easy device care
 carry out.....43
 Intensive device care
 carry out.....44

3 Device help 48

L. Transporting the device 51

[Consumption values 52

Consumption value table 52

Most efficient program for cotton fabrics 52

{ Technical specifications 53

) Disposal 53

4th Customer service 54

8th Intended Ber use

- This device is intended exclusively for use in private households and in the domestic environment. Do not set up or operate this device in areas where there is a risk of frost and / or outdoors. Residual water in the device can freeze and damage the device. Frozen hoses can tear / burst. Use this appliance only for drying and freshening up in the household and for textiles that have been washed with water and that are suitable for tumble drying (see textile label). Any further use is considered improper and is prohibited.
- This device is for use up to a height of at most 4000 meters above sea level determined.

Before you start using the device:

Check the device for visible damage. Do not operate a damaged device. If you have any complaints, inform your specialist dealer or our customer service.

Read the operating and installation instructions and all other information enclosed with this device and act accordingly.

Retain the documents for later use or for the next owner.

(safety instructions

The following safety instructions and warnings are intended to protect you and those around you from injuries and property damage maintain.

Nevertheless, never neglect the necessary caution and care during the installation, maintenance, cleaning and operation of the device.

Children / people / pets

:warning

Risk of death!

Children and people who are unable to assess the dangers involved in using the device can get into life-threatening situations or injure themselves. Therefore please note:

- This device can be used by children from 8 years of age and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, provided they are supervised or with regard to safety Have been instructed in the use of the device and understand the resulting dangers.
- Children are not allowed to play with this device.

- Do not allow children to carry out cleaning or maintenance work on this device without supervision.
- Keep children under the age of 3 and pets away from this device.
- Do not leave the device unattended when children or people who cannot assess the dangers are nearby.

:warning

Risk of death!

Children can lock themselves in devices and endanger their lives.

- Do not place the appliance behind a door that blocks or prevents the appliance door from opening.
- Pull out the power plug on disused devices and cut them **thereafter** the power cord and destroy the lock on the appliance door.

:warning

Suffocation hazard!

When playing, children can become wrapped in packaging / foils and packaging parts or pull them over their heads and suffocate. Keep packaging, foils and packaging parts away from children.

:warning

Risk of poisoning!

Detergents and care products can cause poisoning when consumed. If accidentally swallowed, seek medical advice. Keep detergents and care products out of the reach of children.

:warning

Eye / skin irritation!

Contact with detergents and care products can cause eye / skin irritation. In the event of contact with detergent / care products, rinse your eyes or skin thoroughly. Keep detergents and care products out of the reach of children.

installation

:warning

Risk of electric shock / risk of fire / damage to property and equipment!

Improper installation of the device is dangerous. Make sure that:

- The mains voltage at your socket and the voltage information on the device (Device label) must match. The connection values and the required fuse are specified on the rating plate.

- The device must not be supplied via an external switching device, such as a timer, or connected to a circuit. which is regularly switched on and off by the energy supplier. The mains plug and the protective contact socket must match

and the grounding system must be installed according to regulations.

- The installation must have a sufficiently large cable cross-section. The power plug
- must be freely accessible at all times. If this is not possible, a switch (2-pole disconnection) must be installed in the fixed installation in accordance with the regulations for the

Electrical installation.

- When using a residual current circuit breaker, only one type with the symbol z can be used. Only this symbol guarantees compliance with the current regulations.

:warning**Risk of electric shock / risk of fire / damage to property and equipment!**

Modifying or damaging the power cord of the device can lead to electric shock, short circuit or fire due to overheating.

The power cord must not be kinked, crushed or modified and must not come into contact with heat sources.

:warning**Fire hazard / property and equipment damage!**

The use of extension cables or multiple sockets can lead to fire due to overheating or short circuits.

Connect the device directly to a properly installed and earthed socket. Do not use extension cables, multiple plugs or

Multiple couplings.

:warning**Risk of injury / damage to property and equipment!**

- The device can vibrate or move during operation and cause injury or property damage.

Set up the device on a clean, level and firm surface and align it with the screw feet using a spirit level.

- **D a s i s a c H** proper installation (stacking) of this device on top of a washing machine can lead to injuries as well as property and equipment damage. This device can only be used on a washing machine the same depth and width if a suitable connection kit is available. *~Page 15*

It is essential that you attach the device with this connection kit. There is no other set-up method allowed.

- **B e i m A n h e b** en or slide If the appliance is on protruding components (eg appliance door), the components can break off and cause injuries. Do not move the device by protruding parts.

:warning

Risk of injury!

- You could injure yourself when lifting the device due to the heavy weight. Do not lift the device alone.
- **s. i e** you could cut your hands on the sharp edges of the device. Do not take hold of the device by the sharp edges and use protective gloves.
- **d. u r** There is a risk of tripping and injury if the hose and power lines are improperly laid. Lay hoses and lines so that there is no risk of tripping.

business

:warning

Risk of explosion and fire!

Laundry that has been treated with solvents, oil, wax, wax remover, paint, grease or Contact with the stain remover may ignite if it dries or cause the device to explode. Therefore, please **Siote:**

- Rinse the laundry thoroughly with hot water and detergent before drying.
- Do not dry unwashed laundry in this appliance.

- Do not use the appliance if industrial chemicals have been used to clean the laundry.

: warning

Risk of explosion and fire!

- Residues in the fluff filter can ignite during drying and lead to an explosion or fire to the device.

Clean the lint filter regularly.

- **E.i n i G e** Objects can ignite when drying and cause the device to explode or fire.

Remove lighters and matches from the pockets of the fabrics.

- **s. t a u b** v Coal or flour around the device can cause an explosion. Make sure that the area around the device is kept clean during operation.

:warning

Fire hazard / property and equipment damage!

The device contains the environmentally friendly but flammable refrigerant R290. Keep naked flames and sources of ignition away from the device.



:warning**Fire hazard / property and equipment damage!**

Aborting the program before the end of the drying cycle prevents the laundry from cooling down sufficiently and can cause the laundry to catch fire or damage to property and equipment.

- The last part of the drying cycle is done without heat (cool down cycle) to ensure that the laundry remains at a temperature that does not damage the laundry.
- Do not switch off the appliance before the end of the drying cycle, unless all items of laundry are immediately removed and spread out (to give off heat).

:warning**Risk of poisoning / property damage!**

Condensation water is not drinking water and can be contaminated with lint. Contaminated condensation water can cause health and property damage.
Do not drink or use.

:warning**Risk of poisoning!**

Cleaning agents that contain solvents, such as benzene, can produce poisonous fumes.

Do not use cleaning agents that contain solvents.

:warning**Risk of injury!**

- If you lean on / sit on the open door, the device can tip over and cause injuries.

Do not lean on the open appliance door.

- **B. e. i. m** Stepping on the appliance can break the worktop and cause injury.

Do not step on the device.

- **B. e. i. m** Reaching into the rotating drum can injure your hands come.
Wait until the drum stops rotating.

Caution!

Property and equipment damage

- Exceeding the maximum load
Impairs the function of the device or leads to property and device damage.
Do not exceed the maximum load with dry laundry.
Please note the maximum load of the programs. ~Page 21
- E i n B. Operation with a missing, incomplete or defective fluff protection device (eg fluff filter, fluff container, depending on the device equipment) can damage the device to lead.
Do not operate the device with a missing, incomplete or defective lint protection device.
- L e i c H t e Things like hair and lint can get sucked in from the air inlet during operation. Keep them away.
- s c H a u Plastic or foam rubber can deform or melt when drying.
Do not dry any laundry that has foam or
Contains foam rubber.

- Incorrect dosing of detergents and cleaning agents can lead to damage to property and equipment.
Use detergents, care products, cleaning agents and fabric softeners according to the manufacturer's instructions.
- E n U Overheating of the device can impair the function of the device or lead to property and device damage.
Always keep the air inlet on the device free during operation and ensure adequate ventilation in the room.

Cleaning / maintenance

:warning

Risk of death!

The device is operated with electrical power. Contact with live parts poses a risk of electric shock. Therefore please note:

- Turn off the device.
Disconnect the device from the power supply (pull out the plug).
- Never touch the power plug with wet hands.
- Pull the power plug and never the power cord, as the power cord could be damaged.

- The device and the properties of the device must not be technically changed.
- Repairs and interventions or a change of the power line (if necessary) may only be carried out by customer service or a qualified electrician.
- A replacement power cord is available from customer service.

:warning

Risk of poisoning!

Cleaning agents that contain solvents, such as benzene, can produce poisonous fumes.

Do not use cleaning agents that contain solvents.

:warning

Risk of electric shock / property and device damage!

Penetrating moisture can cause a short circuit. Do not use high pressure cleaners, steam jets, hoses or showers to clean your device.

:warning

Risk of injury / damage to property and equipment!

The use of non-original spare parts and accessories is dangerous and can lead to injuries as well as property and equipment damage. For safety reasons, only use original spare parts and accessories.

Caution!

Property and equipment damage

Detergents and agents for pretreating laundry (eg stain removers, prewash sprays, ...) can damage the surface of the appliance if they come into contact with them. Therefore please note:

- Do not allow these agents to come into contact with the surfaces of the device.
- Only clean the device with water and a soft, damp cloth.
- Remove all detergent residues, spray residue or residues immediately.

7th Savings tips

- Spin the laundry before drying. Drier laundry shortens the program duration and lowers energy consumption.
- Load the device with the maximum load quantities of the programs.

A notice: Exceeding the maximum load length extends the program duration and increases energy consumption.

- Operate the device in a ventilated room and keep the air inlet of the device free so that air can be exchanged. Regularly remove the lint in the appliance. A device soiled with fluff will extend the program duration and increase the


Power consumption.

- If you do not operate the device for a long time before the program starts or after it has ended, the device automatically switches to energy-saving mode. The display and indicator lamps go out after a few moments. **Minutes** and **Start / reload** flashes. You can exit the energy-saving mode by operating the device again, e.g. opening and closing the door.
- If you do not operate the device in energy-saving mode for a long time, the device switches off automatically.

A notice: When Wi-Fi is activated, the device does not switch off automatically.

5 Set up the device and connect

scope of delivery

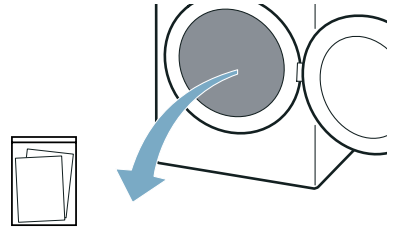

Accompanying documents (e.g. instructions for use and installation)

1. Completely remove packaging material and protective sleeves from the device.
2. Open door.
3. Take all accessories out of the drum.

You can now set up and connect the device.

Caution!

Property and equipment damage

Objects left in the drum that are not intended for use in the device can cause property damage and damage to the device. Remove these objects and all accessories from the drum.

Set up the device

:warning

Risk of death!

Children can lock themselves in devices and endanger their lives.

- Do not place the appliance behind a door that blocks or prevents the appliance door from opening.

- Pull out the power plug from disused devices and cut through them **thereafter** the power cable and destroy the lock on the appliance door.

:warning

Risk of explosion and fire!

Dust from coal or flour in the vicinity of the device can cause an explosion.

Make sure that the area around the device is kept clean during operation.

:warning

Risk of fire / damage to property and equipment!

The device contains the environmentally friendly but flammable refrigerant R290. Keep naked flames and sources of ignition away from the device.



:warning

Risk of injury / damage to property and equipment!

- The device can vibrate or move during operation and cause injury or property damage.

Set up the device on a clean, level and firm surface and align it with the screw feet using a spirit level.

- Incorrect installation (stacking) of this device on a washing machine can lead to injuries as well as property and device damage.

This device can only be placed on a washing machine of the same depth and width if a suitable connection kit is available. ~Page 15

It is essential that you attach the device with this connection kit. Any other installation method is not permitted.

- When lifting or pushing the Device on protruding components (e.g. Components (e.g. appliance door) can break off and cause injuries.

Do not move the device by protruding parts.

:warning

Risk of injury!

- You could injure yourself when lifting the device from the heavy weight.

Do not lift the device alone.

- You could cut your hands on the sharp edges of the device.

Do not take hold of the device by the sharp edges and use protective gloves.

Caution!

Property and equipment damage

Overheating of the device can impair the function of the device or lead to property and device damage. Always keep the air inlet on the device free during operation and ensure adequate ventilation in the room.

de Set up and connect the device


Caution!

Property and equipment damage

The device was subjected to a function test before it left the factory and may contain residual water. This residual water can run out if the device is tilted more than 40 °.

Set up the device as follows:

1. Set up the device on a clean, level and firm surface.
2. Check the alignment of the device with a spirit level.

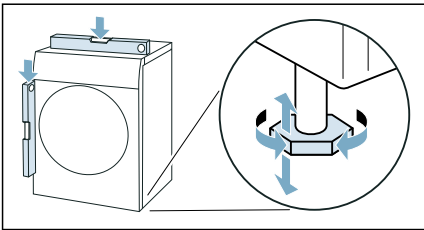

3. If necessary, realign the device by turning the device feet. You can now connect the device.

Hint wise

- All device feet must be firmly on the floor.
- If the devices are incorrectly aligned, noises, vibrations and an uneven drum run can occur and residual water may leak out of the device.

Connect device

⚠warning

Risk of electric shock / risk of fire / damage to property and equipment!

Improper installation of the device is dangerous. Make sure of the following:

- The mains voltage at your socket outlet and the voltage information on the device (device label) must match. The connection values and the required fuse are specified on the rating plate. The device must not be supplied via an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the energy supplier.
- The mains plug and the protective contact socket must match and the earthing system must be installed according to regulations.
- The installation must have a sufficiently large cable cross-section.
- The power plug must be freely accessible at all times. If this is not possible, a switch (2-pole disconnection) must be installed in the fixed installation in order to comply with the relevant safety regulations in accordance with the regulations for electrical installation.
- When using a residual current circuit breaker, only one type with the symbol can be used. Only this symbol guarantees compliance with the current regulations.

⚠warning

Risk of electric shock / risk of fire / damage to property and equipment!

Modifying or damaging the power cord of the device can lead to electric shock, short circuit or fire due to overheating.

The power cord must not be kinked, crushed or modified and must not come into contact with heat sources.

:warning**Risk of fire / damage to property and equipment!**

The use of extension cables or multiple sockets can lead to fire due to overheating or short circuits.

Connect the device directly to a properly installed and earthed socket. Do not use extension cables, multiple plugs or multiple couplings.

:warning**Risk of injury!**

Incorrect laying of the hose and power lines creates the risk of tripping and injury. Lay hoses and lines so that there is no risk of tripping.

Connect the device as follows:

1. Insert the mains plug of the device into the socket provided for this purpose.
 2. Check that the power plug is firmly seated.
- Your device is now ready for use.

Caution!**Property and equipment damage**

The device contains coolant and can be damaged if the device is operated immediately after transport.

Let the device stand for two hours before starting it up.

A notice: If in doubt, have the device connected by qualified personnel.

Before first use**Before you start using the device:**

Check the device for visible damage. Do not operate a damaged device. If you have any complaints, inform your specialist dealer or our customer service.

A notice: After it has been properly installed and connected, the device is ready for operation. No further action is necessary.

Optional accessories

Order the optional accessories * from customer service:

- **Basket for woollens:**
Dry or air individual woolen textiles, sports shoes and cuddly toys in the wool basket.
- Order number: **WZ20600**.
- **Pedestal:**
Elevate your dryer with a pedestal for easier loading and unloading.

You can transport laundry with the integrated laundry basket in the pull-out of the platform.

- Order number: **WZ20500**.

- **Washer-dryer stack connection set:**

You can place the dryer on a suitable washing machine of the same depth and width to save space.

Only use this connection kit to attach the dryer to the washing machine.

- Order number with pull-out worktop: **WZ27400**

- Order number without pull-out worktop: **WZ27410**.




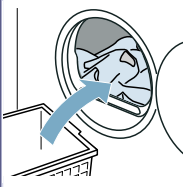
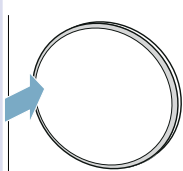
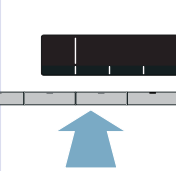
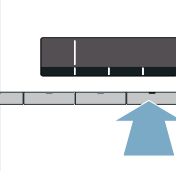
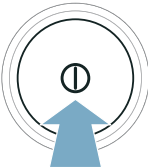
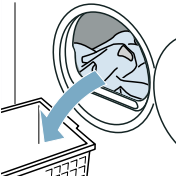

- **Connection set:**
You can drain the condensation water from the device into the waste water using a drainage hose. In this case you do not have to empty the condensed water container during drying or after drying.

- Order number: ~

* depending on the equipment


Quick start Guide

A notice: The device must be set up and connected properly.
~ page 12

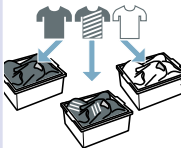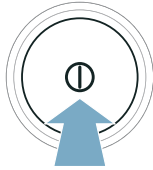1	In front Program start:	@ 	@ 	@ 		
		Sort laundry.	Turn on a device.	Select program.		
		2		@ 	@ 	@ 
				Open the door and Load laundry.	Close the door.	If necessary: Program entry change positions.
3	To End of program:	@ 	@ 	@ 		
		Switch off the device.	Open the door and Remove laundry.	Condensation- Empty the container.		

* Get to know the device

Device overview

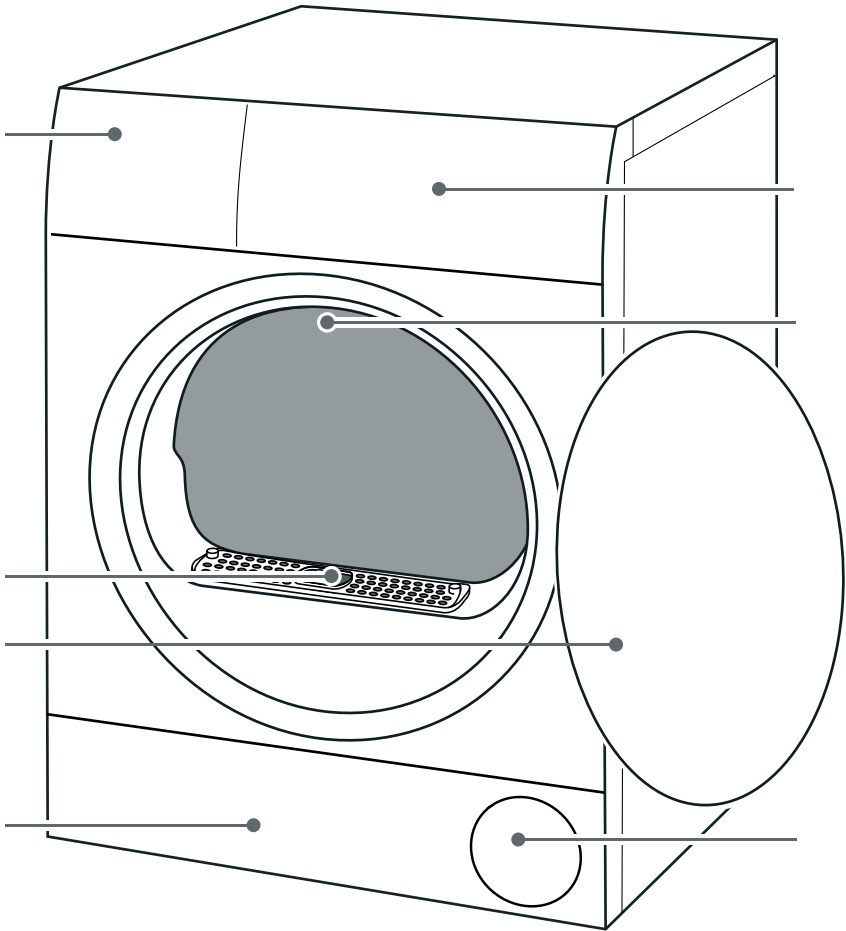

(**Condensation container** ~ Page 28

0 **cover**

8th **Drum interior lighting** (depending on the equipment)

@ **Air inlet**


H **Maintenance flap of the base unit** ~ Page 38

P. **door**

X **Air duct cover** (do not remove)


de Display

cover

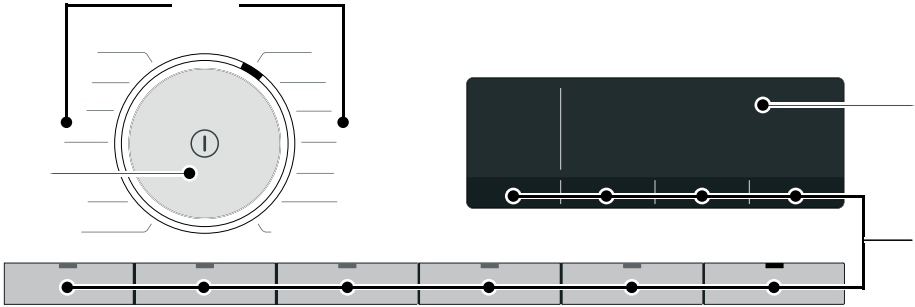

- (**Programs**
- 0 **Program selector**
 - Turn: set the program
 - Press: Switch device on / off
- 8th **Display**
Display of settings and information
- @ **Keys**
for program settings and additional functions / device settings

YDisplay

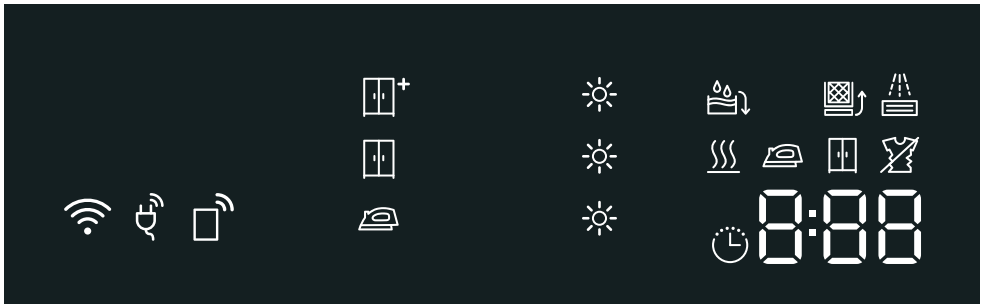

advertisement	description	information
	Program status:	shines: Status display
e	dry	
O	Iron dry	
»	Cupboard dry	
Ý	Anti-crease	
~-	Break	
“ÿš	End of program	
O	Dry target	Dry target O cupboard dry plus activates the
»		dryness level » Cupboard dry activates the
O		dryness level O iron dry activated Degree of
O	Degree of dryness	dryness activated for a dryness target
ÔÔ ÔÔÔ		
e.g. 1:27	Program duration	Estimated program duration in hours and minutes.
3h	End of program	Program delay in hours if you have activated the finished in time.
û	Time program	Time program activated
†	Wi-fi	<ul style="list-style-type: none"> ■ the end: Wi-Fi is disabled and your device is not connected to the home network. ■ flashes: Your device tries to establish a connection with the home network. ■ shines: Wi-Fi is activated and your device is connected to the home network.
}	Remote start	shines: Remote start function is activated. ~ Page 23
±	Energy manager	shines: Device is connected to the Smart Energy System (energy manager) (not available in every country)

<p>ð</p>	<p>Condensate container empty ter ~ Page 28</p>	<ul style="list-style-type: none"> ■ Empty and insert the condensation container. ~ Page 28 ■ Then press Start / Reload. Clean the sieve in the condensation container. ■ If the optional drain hose * is installed, ensure that the drain hose: <ul style="list-style-type: none"> - connected correctly. is - laid without kinks. - is not blocked or clogged, e.g. by deposits. ■ Carry out intensive device care. Check whether ■ foreign objects have entered the base unit. Open the maintenance flap and remove foreign objects.
<p>ç</p>	<p>Ground unit</p>	<p>Clean the base unit ~ Page 38</p>
<p>é</p>	<p>Automatic rinsing of the heat exchanger</p>	<p>The heat exchanger is cleaned automatically. During the process displayed, do not pull out the condensate container and do not cancel the program.</p>
<p>§ "</p>	<p>Easy device care</p>	<p>No mistake. After a period of use, the device automatically recommends simple device care. Carry out simple device care. ~Page 43</p>
<p>• © £</p>	<p>Cool down</p>	<p>High temperatures can arise during drying. The CoolDown process lowers the temperature to prevent laundry damage if you:</p> <ul style="list-style-type: none"> ■ pause the program ■ cancel the program ■ switch off the device via the app <p>The CoolDown is only started 30 seconds after pausing, canceling or switching off via the app. The device can still be operated during the CoolDown.</p> <p>Hints</p> <ul style="list-style-type: none"> ■ The drum continues to rotate during the CoolDown even when it is paused. ■ Do not change the program during the CoolDown. ■ The temperature regulation can last up to 10 minutes.

/Program overview

program	maximum load
<p>Program name Brief explanation of the program and for which textiles it is suitable.</p>	<p>maximum load dung based on the dry weight of the textiles</p>
<p>cotton Hard-wearing textiles, heat-resistant textiles made of cotton or linen.</p>	<p>8 kg</p>
<p>Easy-care Textiles made from synthetic or blended fabrics.</p>	<p>3.5 kg</p>
<p>Fast mix Mixed loads of cotton and synthetic fabrics.</p>	<p>3 kg</p>
<p>Lingerie Delicate, washable underwear, e.g. made of lace, Lycra, satin or mixed weave.</p>	<p>1 kg</p>
<p>Wool finish Machine washable wool or textiles with a wool content.</p> <p>Hints</p> <ul style="list-style-type: none"> ■ Textiles become fluffier, but not dry. ■ Remove the fabrics at the end of the program and let them dry. 	<p>0.5 kg</p>
<p>warm û Time program for all types of textiles except silk. Suitable for pre-dried or slightly damp laundry and for subsequent drying of multi-layered, thick laundry.</p> <p>Hints</p> <ul style="list-style-type: none"> ■ Only dry wool, sports shoes and cuddly toys with the basket for woollens. ■ The residual moisture in the laundry is not automatically detected in the time program. 1 pair If the laundry is still too damp after drying, repeat the program and extend the program duration if necessary. 	<p>3 kg max.load for Wool / cuddly toys in the basket: 1 basket filling max.load for Shoes in the basket:</p>
<p>intelligentDry È After you have washed your laundry in the washing machine, a suitable program for drying the laundry is recommended on the dryer. More information: ~Page 37</p> <p>Hints</p> <ul style="list-style-type: none"> ■ The washing machine must be Home Connect capable. ■ The washing machine and dryer must be connected to the home network and registered in your Home Connect app. 	<p>depends on the Program recommendation lung</p>

Shirts / Business	1.5 kg
Shirts / blouses made of cotton, linen, synthetic or blended fabrics. A notice: After drying, iron the laundry or hang it up. Residual moisture is then distributed evenly.	
Quilts	2.5 kg
Textiles filled with synthetic fibers, pillows, quilts or bedspreads. A notice: Dry large parts individually. Note the maintenance indicators.	
Pillow	1 pillow
Pillows filled with down or synthetic fibers. A notice: Shake up the down pillows at the end of the program to distribute the filling and dissolve moisture pockets. If necessary, start the program again.	
Outdoors	1 piece
Weather and outdoor clothing with membrane coating and water-repellent textiles.	
towels	6 kg
Hard-wearing towels and bathrobes made of cotton.	
Super 40	1 kg
Mixed load of synthetic and light cotton.	
hygiene	4 kg
Hard-wearing textiles. A notice: The program reaches higher temperatures. Particularly suitable for increased hygienic requirements.	

0settings

Program entry position	function
<p>A notice: Some settings cannot be activated in all programs. The activated settings are shown on the buttons or highlighted in the display. You can change or deactivate activated settings by repeatedly pressing the corresponding buttons.</p>	
<p>Remote start}</p>	<p>with Remote start} you can enable the appliance for remote start via the Home Connect app or call up the Home Connect settings.</p> <p>Hints</p> <ul style="list-style-type: none"> ■ Please note the information on ambient temperatures ~ <i>Page 53</i>. ■ The appliance door must be closed and the appliance connected to the home network in order to activate remote start. ■ The remote start is deactivated for safety reasons under the following conditions: <ul style="list-style-type: none"> ■ Open door, ■ Power failure, ■ Press Start / Reload on the device, ■ briefly again Remote start to press, ■ Press # to switch off the device.
<p>üDry target:</p>	<p>The drying level defines how damp or dry the laundry is after the program has ended.</p> <p>If you have set a dryness level, this remains saved for the respective program even after the appliance has been switched off. Exception: The settings are not saved for cotton.</p>
<p>O wardrobe-dry plus</p>	<p>Multi-layered, thick laundry that does not dry well.</p>
<p>» cupboard dry</p>	<p>Normal, single-ply laundry.</p>
<p>Oiron dry</p>	<p>Normal, single-ply laundry that should be damp after drying and is suitable for ironing or hanging up.</p>
<p>Degree of dryness</p>	<p>If you find the laundry too damp after drying, you can adjust the level of dryness for a dryness level and in the steps from Ountil ÔÔÔ raise. This extends the program duration while maintaining the same temperature.</p> <p>If you have adjusted the degree of dryness for a dryness level, the setting is saved even after the device is switched off.</p>
<p>M. Completed in N</p>	<p>Before the program starts you can end the program with M.and Ndelay up to a maximum of 24 hours.</p> <p>The set number of hours is shown in the display, e.g. B. 8h, displayed and counted down until the program begins. After the program has started, the program duration is displayed.</p> <p>A notice: Please note the information on ambient temperatures ~ <i>Page 53</i>.</p>

M. Completed in N	The drying time for Time programs can with M.andN can be extended in 10-minute steps.
M / N	With the selection buttonsM.andNyou can adjust setting values.
Anti-crease 60 Min.	The drum moves the laundry at regular intervals after drying to prevent creasing. You can use the automatic anti-crease function for 60
Anti-crease 120 Min.	Minutes (with Anti-crease 60 min.) or for 120 minutes (with Anti-crease 120 Min.) activate or deactivate.
Nice	Reduced temperature for sensitive textiles such as polyacrylic or elastane can extend the drying time.
Start / reload	Starting, canceling and interrupting a program.
Device setting function lung	
You can find out how to adjust the device setting at ~ <i>Page 29</i>	
Parental controls 3 sec.w	Secure the cover to prevent it from being operated inadvertently.
signalV	With signalV specify whether a signal should sound at the end of the program. If the setting is selected, the indicator lamp of the button lights up and the acoustic signal is activated.

ZLaundry

Prepare laundry

⚠warning

Risk of explosion and fire!

Some objects could ignite when drying and cause an explosion or fire to the device. Remove lighters and matches from the pockets of the textiles.

Caution!

Damage to the drum and fabrics

The drum and textiles can be damaged during operation if you leave objects in the pockets of the textiles. Remove all objects, such as metal parts, from the pockets of the textiles.

Prepare laundry as follows:

- Tie fabric belts, apron strings, etc. together or use a laundry bag.
- Close zips, hooks, eyes and buttons. Button large items of laundry such as covers.
- Dry very small items e.g. baby stockings, always together with large items of laundry, e.g. towels.
- Use a time program for individual items of laundry.
- Knitted textiles such as T-shirts and tricots often shrink when they dry for the first time. Use a gentle program.
- Do not overdry easy-care laundry. This leads to increased creasing in the laundry.

- Some detergents and care products Eg laundry starch or fabric softener contain particles that can be deposited on the moisture sensor. This can impair the function of the sensor and thus the drying result.

Hints

- Use the detergent and care agent when washing the laundry to be dried according to the manufacturer's instructions.
- Clean the moisture sensor regularly ~ *Page 41*.

Wsort the ashes

A notice: Load the laundry into the appliance one at a time. Avoid bundles of laundry in order to get a good drying result.

Caution!

Property damage to the dryer or textiles

Laundry that is not suitable for the dryer can damage the appliance and the laundry during drying. Before drying, sort the laundry according to the information on the care label:

- c Suitable for tumble dryers
- a Dry at normal temperature
- ` Low temperature drying
- b Do not tumble dry

When sorting the laundry to be dried, also keep the following in mind:

- Dry laundry of the same type of fabric and structure together to achieve an even drying result.

If you dry thin, thick or multi-layered textiles together, they will dry differently.

de Operate the device

- Follow the drying program description of the textile.

~ "Program overview "
on page 21

A notice: When you do the laundry after feel that drying is too damp, you can select a timed program for post-drying.

Caution!

Property damage to the device or textiles

Dry the following items **Not** in the device:


- Laundry soiled with solvents, wax or grease.
- Unwashed textiles. Air-
- impermeable textiles, e.g. rubberized laundry.
- Delicate textiles, e.g. silk, synthetic curtains.

1 Operate the device


Switch on the appliance and load the laundry

A notice: The device must be set up and connected properly.
~ page 12


1. Prepare and sort laundry.
2. Press # to switch on the device.

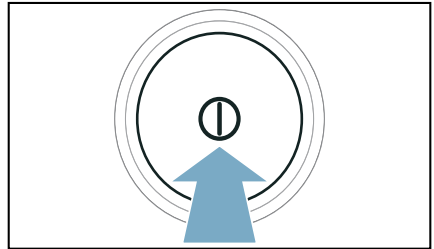


3. Open door.
Check that the drum is completely empty. Empty if necessary.

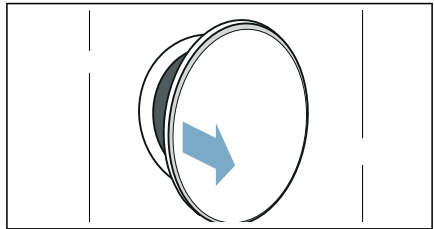

- 4th Unfold the laundry and place it in the drum.

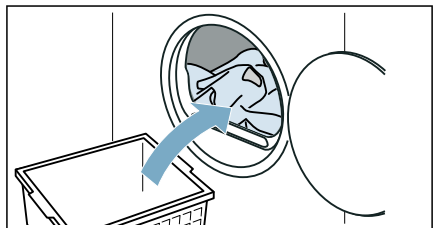

5. Close the door.

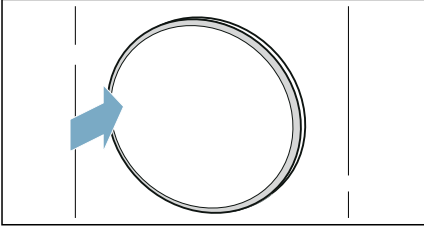

Caution!

Property damage to the device or textile possible.

Do not get laundry caught in the door.




A notice: The drum of the device is illuminated after opening, closing and starting the program. The interior drum light goes out self-employed.

Set the program

A notice: If you have activated the child lock, you must first deactivate it before you can set a program. ~Page 29

1. Set the desired program.

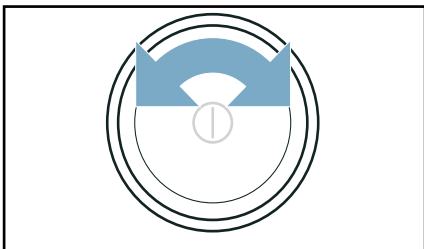

The program settings appear in the display.

2. Adjust the program settings, if desired.

Start the program

on **Start / reload** to press.

A notice: If you want to secure the program against inadvertent adjustment, activate the child lock. ~Page 29

Program Sequence

The program status is shown in the display.

A notice: When a program is selected, the expected drying time for the maximum load is displayed. When drying, the moisture sensor determines the residual moisture in the laundry. Depending on the residual moisture, the program duration and the remaining time display are automatically adjusted during operation (except for time programs).

Change program or Add laundry

You can remove or add laundry at any time during the drying process and change or adapt the program.

1. Open or open the door **Start / reload** press for a pause.

A notice: If the CoolDown is active, the drum continues to rotate even when it is paused. You can cancel the CoolDown at any time by opening the door.

2. Add or remove laundry.
3. If required, a different program or a different program setting

choose. ~ "Program overview "on page 21

de Operate the device

A notice: Do not change the program during CoolDown.

4th Close the door.

5. on **Start / reload** to press.

A notice: The program duration in the display is updated depending on the load and residual moisture in the laundry. The displayed values can change after a program or load change.

Cancel the program

The program can be interrupted at any time by opening the door or **Start / reload** to press.

Caution!

Fire hazard. Laundry can catch fire.


If you cancel the program, you must remove all items of laundry and spread them out so that the heat can escape.

End of program


The message appears in the display: "ÿš"

Remove the laundry and switch off the appliance

1. Remove laundry.

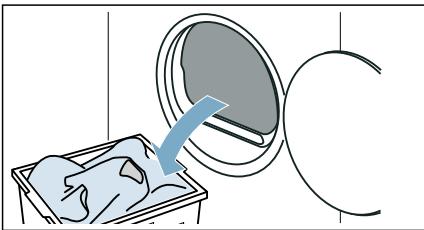


2. Press # to switch off the device.

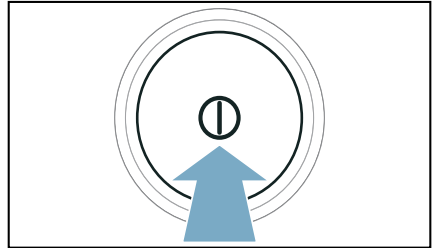


Empty the condensate container

A notice: Empty the condensate container after each drying, otherwise the next drying program can be aborted because the condensate container is full.

1. Pull out the condensation container horizontally.

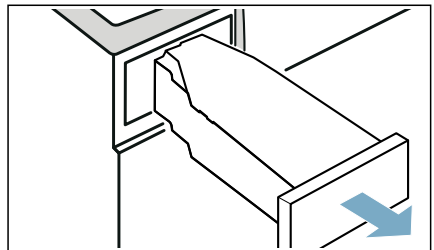

2. Pour out condensed water.

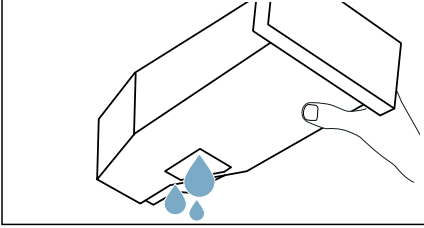


Caution!

Health and property damage possible

Condensation water is not drinking water and can be contaminated with lint. Contaminated condensation water can cause damage to health and property. Do not drink or continue to use.

3. Push the condensation container back into the device until you feel it click into place.

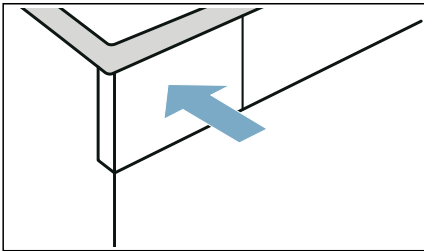

A notice: The sieve in the condensed water container filters the condensed water, which is used for the automatic cleaning of your device. The sieve is cleaned by emptying the condensed water. Nevertheless, check the sieve regularly for remaining deposits and remove them if necessary.

~ "Cleaning the filter in the condensate container" on page 41

2 Device settings

You can adjust or activate / deactivate the **G** child lock and general settings (e.g. signals).

Parental controls

By activating the child lock, you prevent accidental use of the panel.

Activate / deactivate child lock:

- **Child lock 3 sec.w** for
Press for 3 seconds.

A notice: The childproof lock remains activated even after the appliance has been switched off. In order to be able to operate the panel after switching it on, you must deactivate the childproof lock.

Warning signal

You can activate or deactivate the notification signal at the end of the program. If you activate this setting, an acoustic signal sounds at the end of the program.

Activate / deactivate device setting as follows:

on **signalV** to press.

The notification signal at the end of the program is activated / deactivated.


A notice: If no signal sounds at the end of the program, although the information signal is activated, you can adjust the appliance settings.

Basic settings

You can adjust certain basic settings on the device. To be able to make adjustments, you have to first the **Call up setting mode:**


de Device settings

1. Set the program to position (.

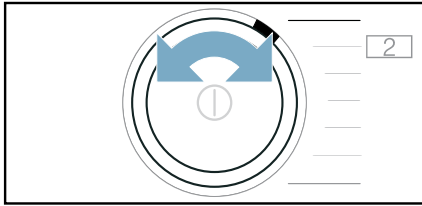

2. on **üDry target** press and at the same time:


3. Program on position 0 to adjust.

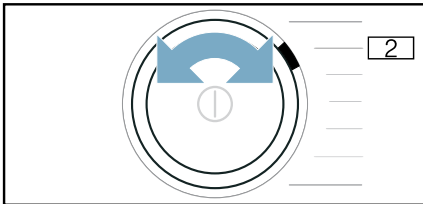

4th **üDry target** let go.

The setting mode is activated.

The basic settings are assigned to the following program positions:

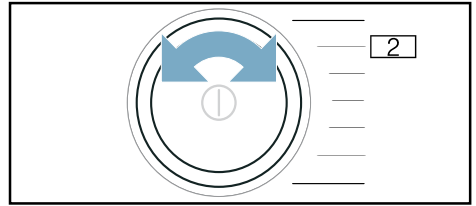

position	Basic setting
0	Adjust the volume of the information signals (e.g. at the end of the program).
8th	Adjust the volume of the operating signals.

Setting values:

0	the end
1	small amount
2	medium
3	high
4th	very high

Adjust and activate / deactivate basic settings as follows

1. Set the position of the desired basic setting.
2. Change setting with:
MN
3. Adjust further basic settings or save basic settings and exit.

Save the basic settings as follows and exit

Switch off the device.

A notice: The settings are saved even after the device is switched off.

OHome Connect

This device is Wi-Fi capable and can be remotely controlled via a mobile device.

Using the Home Connect app, you can use your mobile device on this device:

- Set and start programs. Adjust and activate / deactivate program settings. Query program status.
- Adjust device settings and activate / deactivate.
- Switch off the device.

Before you can use the Home Connect functions, carry out the following steps:

1. Install the Home Connect app on your mobile device.
2. Register in the Home Connect app.
3. Device automatically once **or** connect manually to the home network.
- 4th Connect the device to the Home Connect app.

You can find information about the app on our Home Connect website www.home-connect.com

The Home Connect services are not available in every country. The availability of the Home Connect function depends on the availability of the Home Connect services in your country. You can find information on this at: www.home-connect.com

Hints

- Please note the safety information in these instructions for use and ensure that you adhere to them even if you operate the device via the Home Connect app and are not at home. Please also note the information in the

Home Connect app.

- If the device is being operated, you cannot make changes at the same time using the Home Connect app. However, adjustments to the appliance are visible to you in the Home Connect app.

HOCall up the me Connect menu

In the Home Connect menu you can create and view network connections, reset network settings, activate / deactivate Wi-Fi and find other Home Connect functions.

1. Turn on a device.
2. on **Remote start}** Press and hold for at least 3 seconds. The display shows: 'ž £. You are now in the Home Connect menu.

A notice: Briefly on **Remote start}** push to exit the Home Connect menu.

Connect to the home network and the Home Connect app

Connect your device once **automatically** or **manually** with the home network.

Hints

- If your home network router has a WPS function, you can automatically connect your device to your home network.

- If your home network router does not have a WPS function, you will have to manually connect your device to your home network.

You then need to connect to the Home Connect app.

A notice: To connect your device to the home network, you must **Wi-fi** activated on the device. Factory is **Wi-fi** on the device is deactivated and activated automatically when you connect your device to the home network.


Automatic connection to the home network

Step 2.1

Make sure that you are in the Home Connect menu.

~ Page 31

1. on **Start / reload** to press.
The device now tries to connect to the home network. Flashes in the display.

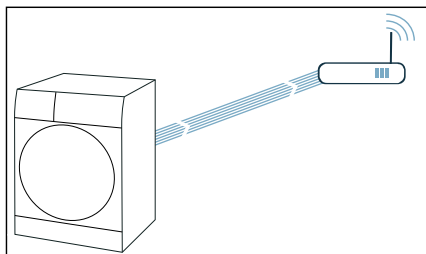

2. Activate the WPS function on the home network router within the next 2 minutes.

If the device has successfully connected to the home network, appears in the display **™ © Ÿ** and **†** lights up continuously.

A notice: If a connection could not be established, check whether your device is within range of the home network. Repeat the automatic connection or perform the manual connection.

Manual connection to the home network


Step 2.2

Make sure that you are in the Home Connect menu.

~ Page 31


Make sure that you have opened the Home Connect app and are logged in.

1. Set the program to position 2.

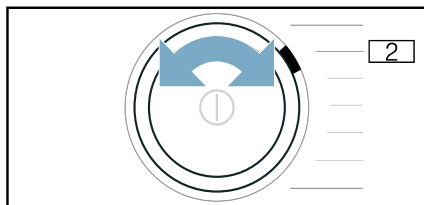

The display shows: **†** **™** (manual connection).


2. on **Start / reload** to press.
The device now sets up its own WLAN network with the network name (SSID) **HomeConnect** on.

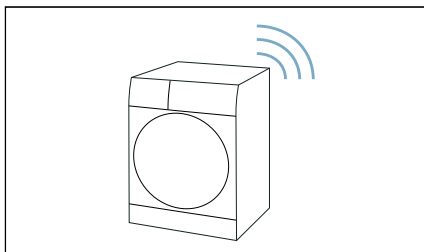

3. Call up WLAN settings in the mobile device.

4th Mobile device with the WLAN network **HomeConnect** connect and WiFi password (key) **Home Connect** enter.

Your mobile device will now connect to the device. The connection process can take up to Last 60 seconds.

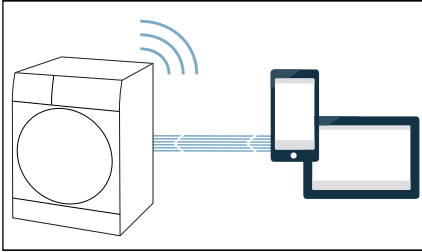

5. After a successful connection, open the Home Connect app on the mobile device and follow the steps in the app.

6th In the Home Connect app the network name (SSID) and the Password (key) **Your home network kes** enter.

7th Follow the last steps in the Home Connect app to connect your device.

If the device has successfully connected to the home network, appears in the display ™ © Ÿ and † lights up continuously.

A notice: If a connection could not be established, check whether your device is within range of the home network. Repeat the manual connection.

Connect with the Home Connect app


If your device is connected to the home network, you have to connect it to the Connect the Home Connect app.

Make sure that you are in the Home Connect menu.

~ Page 31

Make sure that you have opened the Home Connect app and are logged in.

1. Set the program to position 3.

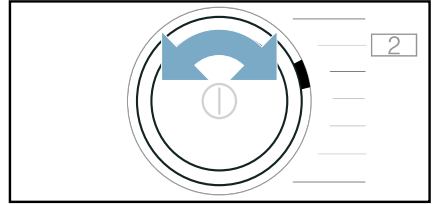

The display shows: ™™ (connect with app).

2. on **Start / reload** to press.

The device will now try to connect to the Home Connect app.

3. As soon as your device is displayed in the app, follow the last steps in the Home Connect app.

A notice: If a connection could not be established, check whether your mobile device is within range of the home network or is connected to it. Repeat the connection with the Home Connect app.


Activate / deactivate Wi-Fi

If your device is already connected to the home network, you can **Wi-fi** Activate or deactivate on your device.

Make sure that you are in the Home Connect menu.

~ Page 31

1. Set the program to position 4.

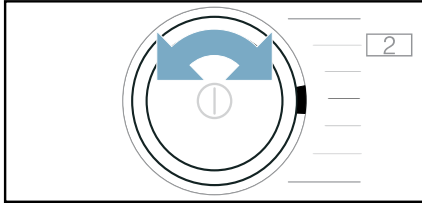

The display shows: '© Ÿ (Wi-Fi function).

- 2. on **Start / reload** to press. Appears in the display © Ÿ, Wi-Fi is activated on the device. Appears in the display © ¨, Wi-Fi is deactivated on the device.

Hints

- When you connect your device to the home network, Wi-Fi is automatically activated.
- When Wi-Fi is enabled, the device does not turn off automatically. If Wi-Fi is switched off on the device, neither remote start nor remote control of the device via the Home Connect app is possible. If Wi-Fi is switched off and your device was previously connected to your home network, the connection will be automatically re-established when Wi-Fi is switched on again. If you activate this function, the energy consumption increases compared to the values specified in the consumption value table.


~ Page 52

Network settings reset to default

You can reset all network settings.

Make sure that you are in the Home Connect menu.
~ Page 31

1. Set the program to position 5.

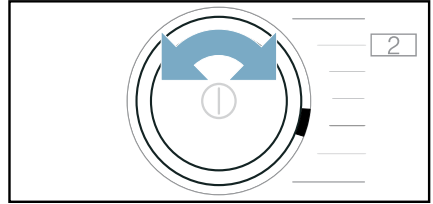

The display shows: § ¨à (Reset network settings).

- 2. on **Start / reload** to press. The display shows: ¸ ¨à.
- 3. on **Start / reload** to press.

A notice: If you would like to use your device again via the Home Connect app, you have to reconnect it to the home network and the Home Connect app.


Software update

You can update the Home Connect software on your device. As soon as a new software update is available, a message appears in the display:-
~§

Install the update directly from the **Notice in the display** or as follows **manually:**

Make sure that you are in the Home Connect menu.
~ Page 31

1. Set the program to position 6.

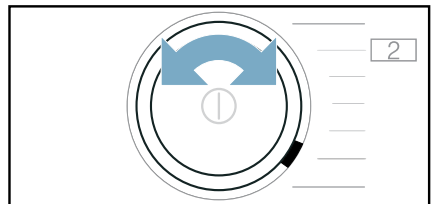

The display shows: —~§ (Update). Start / Reload flashes when a software update is available.

- 2. on **Start / reload** to press.

The display shows: ☺ "à.

3. Start / reload to press.

A notice: Updating the software can take several minutes. Do not turn off the device during the update.

Energy management

You can connect your device to your smart energy system (energy manager).


After you have connected your device to the Smart Energy System (energy manager) and **FlexStart** activated, you can optimize your energy consumption by only starting your device when your in-house photovoltaic system provides enough energy or the electricity tariff is cheap.

Further information and system requirements for using the energy manager can be found at: www.home-connect.com/energymanagement

Hints

- The smart energy system (energy manager) must use the communication standard of the EEBus initiative.
- Read beforehand in the instructions for use of the Smart Energy system (energy manager) how it connects to your device.

1. Set the program to position 7.

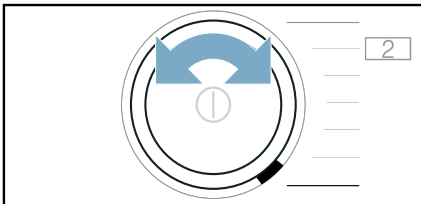

Appears in the display "ÿ® (Energy Manager).

2. on **Start / reload** to press.

Your device is now trying to connect to the Smart Energy System (energy manager). If the device has successfully connected, appears in the display: ™ © Ÿ.

3. Activate Flexstart if your device is to be started by the Smart Energy System (energy manager).

FlexStart

Activate **FlexStart**, so that your smart energy system (energy manager) can start your device when your own photovoltaic system provides enough energy or the electricity tariff is low.

A notice: Your smart energy system (energy manager) can only start your device if the smart energy system (energy manager) and the device are connected to each other.

Activate FlexStart as follows:

- 1.** Select the desired program.
- 2.** With the selection buttons N and M, set the required time for the Ready in time.

3. on **Start / reload** to press.

4th on **Remote start** to press.

Appears in the display ±.

the **FlexStart** is now activated and the device is waiting for remote start via the Smart Energy system (energy manager).

If the time in the display changes to, for example ".< Œ, the Smart Energy system (energy manager) has set a time at which your device is allowed to start. The program ends after the specified time.

Hints

- If the Smart Energy system (energy manager) does not start your device, the program will still be started before the set time has elapsed.

The program ends when the time period expires.

- **Remote start** and so too **FlexStart** are deactivated for security reasons under the following conditions:

- Press Start / Reload.
- Open door.
- Press # to switch off the device.

- Power failure.

Became **FlexStart** deactivated, remains M. **Completed inN** still activated.

Adding or removing laundry afterwards:

A notice: Became **FlexStart** already active fourth and the program has not yet started, you can add or remove laundry

1. on **Start / reload** to press.
2. Open door.
3. Add or remove laundry.
- 4th Close the door.
5. on **Start / reload** to press.
- 6th on **Remote start** to press. the **FlexStart** is now activated and the device is waiting for remote start via the Smart Energy system (energy manager).

Intelligent program recommendation

After you have washed your laundry in the washing machine, a suitable program for drying the laundry is recommended on the dryer.

The expected program duration of the recommended program is determined on the basis of your previous washing program.

In order to determine an optimal drying program, your devices must transmit and receive information.

Therefore, please note the following:

- The wash program must be completed in order to transfer the data.
- The washing machine must be Home Connect capable.
- The washing machine and dryer must be connected to the home network and registered in your Home Connect app.

1. Turn on a device.
2. Program on **intelligentDry È** to adjust.

The analysis starts and an animation appears on the display.

3. To cancel the analysis, set another program or switch off the device. If the suitable program has been found, the animation stops, the LED of the recommended program lights up continuously and program information is shown in the display.

- 4th on **Start / reload** to press.

A notice: If no suitable program could be found, a signal sounds and the following appears in the display: {{{

Please pay attention to the following:

- No suitable drying program found for the selected washing program.
- The washing machine and dryer must be connected to the home network and registered in your Home Connect app.
- Check whether your devices are within range of the home network.

- There is no data from the last wash program. The data is stored for 24 hours and then deleted.
- The wash program was canceled. The washing program must be completed in full.

Remote diagnosis

In the event of malfunctions, customer service can access your device via remote diagnosis.

Contact customer service and make sure that your device is connected to the Home Connect server and check whether the remote diagnosis service is available in your country.

A notice: For further information and the availability of the remote diagnosis service in your country, please visit the Help & Support area of the Home Connect website in your country: www.home-connect.com

Note on data protection

When your device is connected to a WiFi network connected to the Internet for the first time, your device transmits the following categories of data to the Home Connect server (initial registration):

- Unique device identifier (consisting of device keys and the MAC address of the built-in WiFi communication module).
- Security certificate of the Wi-Fi communication module (for information technology protection of the connection).
- The current software and hardware version of your home appliance.
- Status of any previous reset to factory settings.

This initial registration prepares the use of the Home Connect functionalities and is only required at the point in time at which you would like to use the Home Connect functionalities for the first time.

A notice: Note that the Home Connect functionalities can only be used in conjunction with the Home Connect app. Information on Data protection can be accessed in the Home Connect app.

Declaration of Conformity

BSH Hausgeräte GmbH hereby declares that the device with Home Connect functionality complies with the basic requirements and the other relevant provisions of Directive 2014/53 / EU.

A detailed RED declaration of conformity can be found on the Internet at www.siemens-home.bsh-group.com on the product page of your device with the additional documents.



2.4 GHz band: 100 mW max. 5
GHz band: 100 mW max.

	BE	BG	CZ	DK	DE
	EE	IE	Tb	IT	FR
	MR	IT	CY	LV	LT
y	LU	HU	MT	NL	AT
	PL	PT	RO	SI	SK
	FI	SE	UK	NO	CH
	TR				
5 GHz WLAN (Wi-Fi): For indoor use only vacate					

D. Clean and maintain

to clean a device

:warning

Risk of death!

The device is operated with electricity. Contact with live parts poses a risk of electric shock. Therefore please note:

- Turn off the device. Disconnect the device from the mains (pull out the plug).
- Never touch the power plug with wet hands.
- Pull the power plug and never the power cord, as the power cord could be damaged. The device and the properties of the device must not be technically changed.
- Repairs and interventions or a change of the power line (if necessary) may only be carried out by customer service or a qualified electrician.
- A replacement power cord is available from customer service.

:warning

Risk of poisoning!

Solvent-based cleaning agents, such as benzene, can produce poisonous fumes.

Do not use any cleaning agents that contain solvents.

:warning

Risk of electric shock / damage to property and equipment!

Penetrating moisture can cause a short circuit.

Do not use high pressure cleaners, steam jets, hoses or showers to clean your device.

Caution!

Property and equipment damage

Detergents and agents for the pretreatment of laundry (eg stain removers, pre-wash sprays, ...) can damage the surface of the appliance if they come into contact with them. Therefore please note:

- Do not allow these agents to come into contact with the surfaces of the device.
- Only clean the device with water and a soft, damp cloth.
- Remove any detergent residue, spray residue, or residue immediately.

Boclean the unit

This device has automatic self-cleaning. Lint from the laundry does not have to be removed after each use, but is collected in the base unit.

In order not to impair the function of the device, **have to** You only clean the base unit (lint container and lint filter) in the following cases:


- The message appears in the display: ç.
- Before servicing the device.

they **can be optional** clean the bottom unit of the device at all times.


A notice: Let the device cool down for about 30 minutes after use before you start cleaning.

Clean the base unit as follows:


1. Open the maintenance flap on the handle.

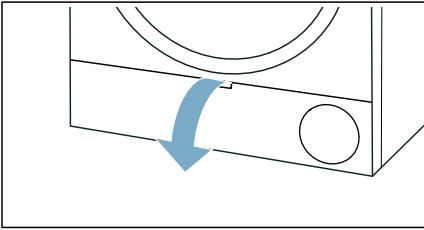


2. Unlock the lever on the heat exchanger cover.

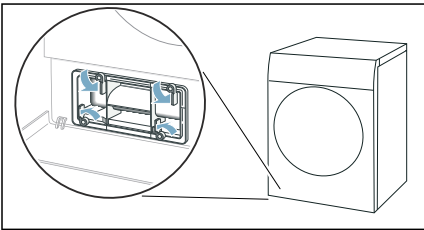

3. Pull out the heat exchanger cover by the handle.

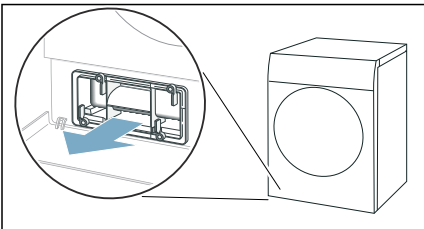


- 4th Remove all lint from the heat exchanger cover and the lint filter.

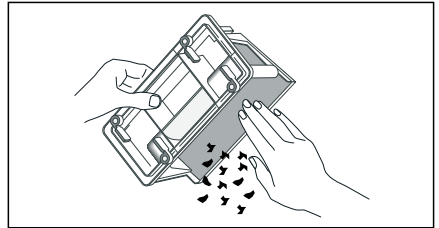

A notice: Make sure that no dirt remains on the seals of the heat exchanger cover.


5. Rinse the inside of the heat exchanger cover and the lint filter thoroughly under running water and dry them.

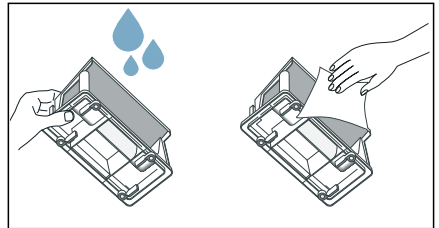**Hints**

- If it is very dirty, you can use a soft brush to clean it.
- Make sure to dry the filter of the lint container thoroughly after rinsing it. A damp fluff filter can extend the drying time and influence the drying result.


de Clean and maintain

6th Pull out the fluff container horizontally.

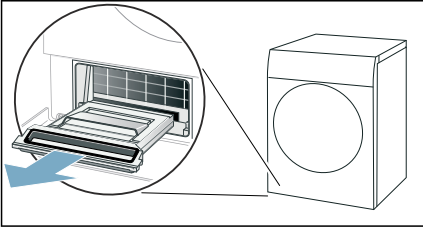


A notice: The lint container may contain damp lint and residual water and drip when it is pulled out.

7th Open the fluff container and remove the fluff.

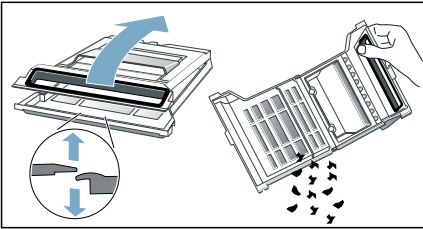

8th. Thoroughly rinse the filter of the lint deposit under running water and dry it.

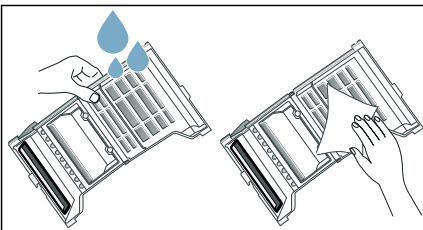


Hints

- If it is very dirty, you can use a soft brush to clean it.
- You must not remove or damage the seal of the fluid reservoir.

- You can also clean the lint container in the dishwasher.


- Make sure to dry the filter of the lint container thoroughly after rinsing it.

9. Close the fluff container.

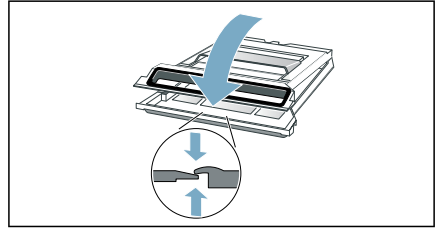


A notice: Make sure that you close the fluff container completely.

10. Push in the fluff container horizontally as far as it will go.

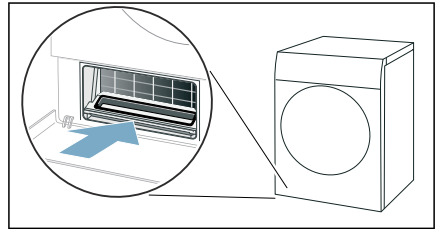


11. Slide in the heat exchanger cover using the handle.

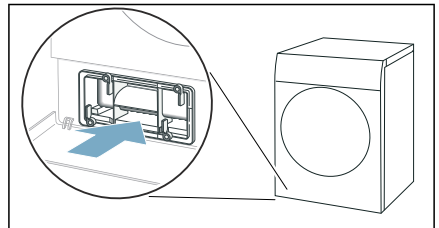


A notice: You can only slide in the heat exchanger cover when the lint reservoir is in the device.

12th Lock the lever on the heat exchanger cover.

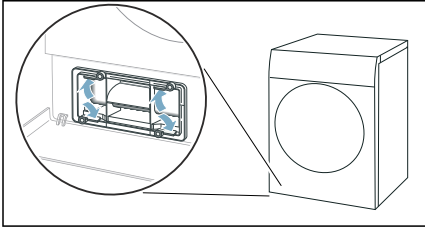

13th Close the maintenance flap.

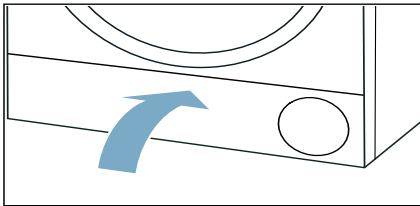

You have cleaned the bottom unit of the device.

Caution!

Property and equipment damage


Operation with a missing, incomplete or defective lint protection device (eg lint filter, lint deposit, depending on the device equipment) can damage the device.

Do not operate the device with a missing, incomplete or defective lint protection device.


Clean the moisture sensor

A notice: The moisture sensor measures the degree of moisture in the laundry. After a long period of use, fine residues of lime or detergents and care products can build up. These deposits must be removed regularly, otherwise the drying result can be impaired.

1. Open door.

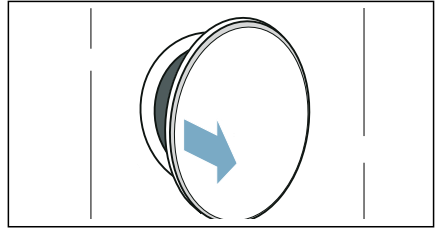

2. Clean the moisture sensor with a roughened sponge.

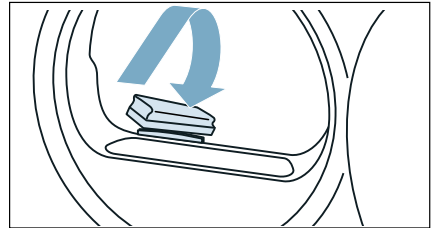

Caution!

The humidity sensor can be damaged.


The moisture sensor is made of stainless steel. Do not clean the sensor with abrasives and steel wool.

Sieve in the condensate Clean the container


A notice: The sieve in the condensate container is used to clean the condensate, which is used for the automatic cleaning of this device is used.

de Device care

1. Horizontal condensate container pull right out.

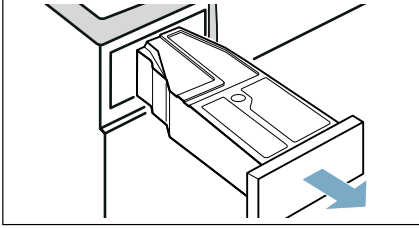


2. Pour out condensed water.
3. Remove the sieve.

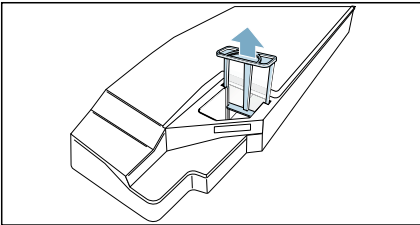

- 4th Clean the sieve under warm running water or in the dishwasher.

A notice: If it is very dirty, you can use a soft brush to clean it.

5. Insert the sieve until you feel it click into place.

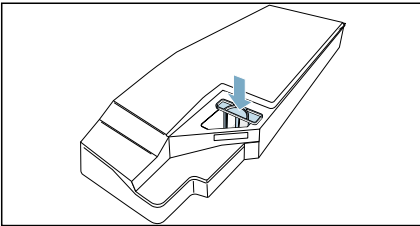

Caution!

Without a sieve, fluff can get into the appliance and damage it.

Only operate the device with the sieve in place.

- 6th Insert the condensation container until you feel it click into place.

ÖDevice care

The device offers additional cleaning programs

that you can run to take care of the device:

- With the simple device care you can remove possible light dirt deposits in the device.
- With intensive device care, you can remove any stubborn dirt deposits in the device as well as odors after a long period of inactivity.

Before you carry out the device care, the device care must be prepared.

:warning

Risk of scalding / damage to property and equipment!

Boiling or hot water can cause severe scalds and damage to property and equipment if it is spilled or leaks.

Do not use boiling water on this device, its components and accessories. Avoid skin contact with hot water or steam.

:warning

Risk of poisoning / property damage!

Condensation water is not drinking water and can be contaminated with lint. Contaminated condensation water can cause damage to health and property.

Do not drink or use.


Prepare equipment care

Prepare the device for device maintenance


The device must **in front** be prepared for simple or intensive device maintenance.

Prepare the device for device care as follows:


1. Clean the base unit. ~ Page 38
2. Open door.
3. Remove laundry.

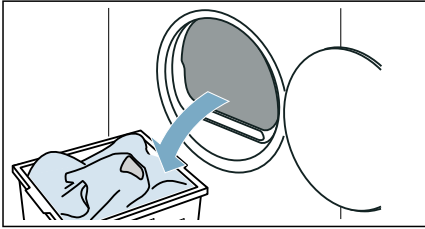

- 4th Close the door.
5. Pull out the condensate container horizontally and empty it.

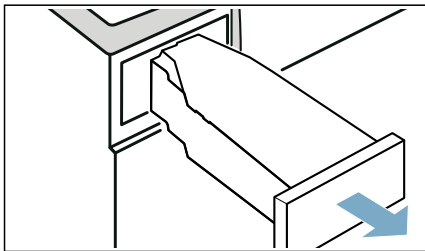

- 6th Press # to switch on the device.

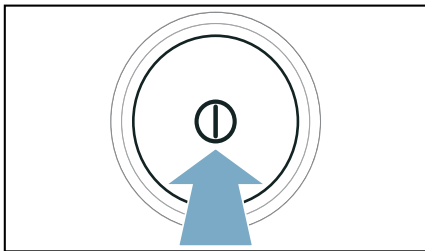

The device is now prepared for device maintenance.

Carry out simple device maintenance


You can carry out the simple device care procedure in order to remove possible light dirt deposits in the device.

Hints

- After a period of use, your device automatically recommends simple device care. Then appears in the display 'S' before the program starts for 5 seconds and after the program has ended. This message appears again until you have completed the simple device maintenance. Simple device care takes about 1 hour.


Carry out device care as follows:

1. Device care prepare. ~Page 42
2. Set the program to position 1.

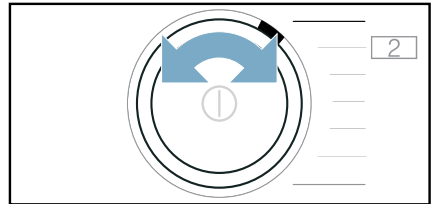

3. on ü Press the dryness target and keep it pressed, at the same time:


- 4th Set the program to position 4.

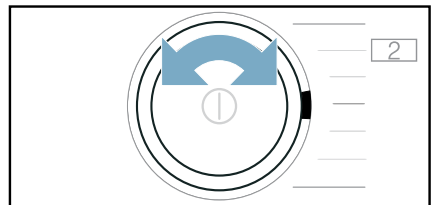

Appear in the display alternately 'S' and the duration of the program.


de Device care

5. Fill approx. 1 ^ liter of warm tap water into the condensation container.

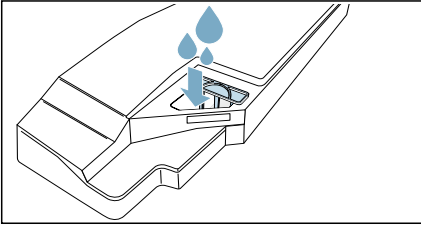

A notice: Always hold the filled condensation container horizontally so that no liquid leaks out.


- 6th Push in the condensation container until it clicks into place.

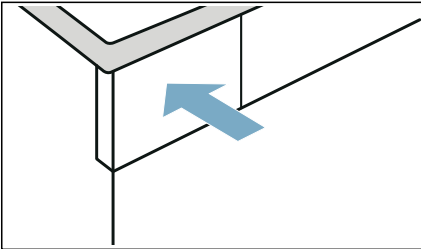


- 7th on **Start / reload** to press. Device care starts and a signal sounds.

Appears in the display "Ÿš" at the end of the device maintenance and a signal sounds.


- 8th. Pull out the condensate container horizontally and empty it.

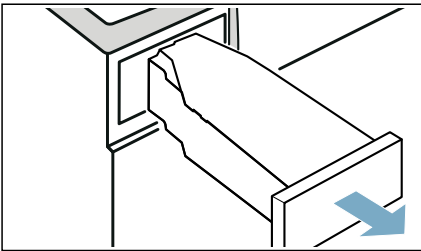

9. Push in the condensation container until it clicks into place.

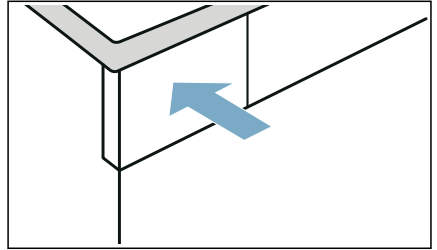

10. Press # to switch off the device.

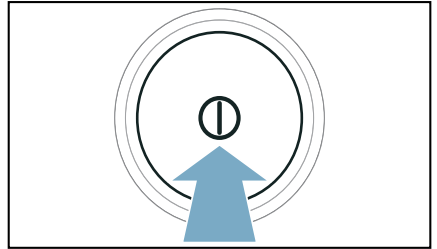

You have carried out device maintenance.

Carry out intensive device care

You can carry out intensive device care to remove any stubborn dirt deposits in the device as well as odors after a downtime of more than a month.

Hints

- The intensive device care takes about 4 hours. The duration can be extended if you do not carry out the necessary steps during the program promptly.
- The intensive device care should not be interrupted after starting the program.

- For intensive device care you need the original care product that you can find under the Spare part number: **00311829** can order from customer service. You will find the contact details for all countries in the enclosed customer service directory.

!warning

Risk of injury / damage to property and equipment!

The use of non-original spare parts and accessories is dangerous and can lead to injuries as well as property and equipment damage.

For safety reasons, only use original spare parts and accessories.

Caution!


Property and equipment damage

Incorrect dosing of detergents and cleaning agents can lead to damage to property and equipment.

Use detergents, care products, cleaning agents and fabric softeners according to the manufacturer's instructions.


Carry out device care as follows:

1. Device care prepare. ~Page 42
2. Set the program to position 1.

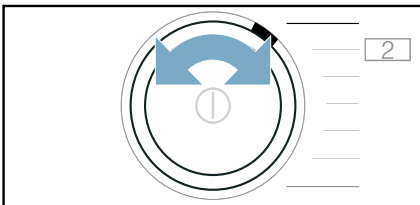

3. on ü Press the dryness target and keep it pressed, at the same time:

- 4th Set the program to position 4.

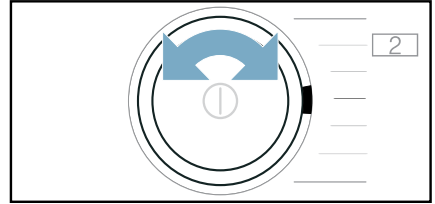


Appear in the display alternately 'i' and the duration of the program.


5. on N to press.

Appear in the display alternately 'f' and the program duration.

- 6th Pull out the condensate container horizontally and empty it.

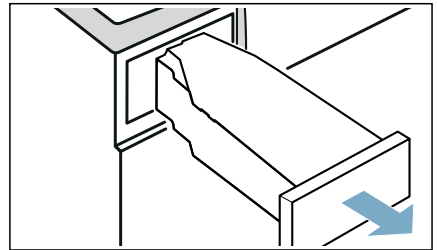


- 7th Fill a bottle of the original care product and approx. 1 ^1 of warm tap water into the condensation container.

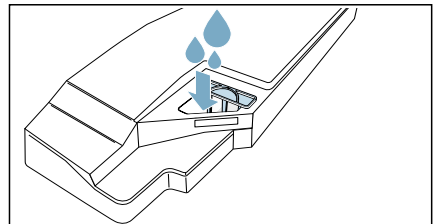

A notice: Always hold the filled condensation container horizontally so that no liquid leaks out.


8th. Push in the condensation container until it clicks into place.

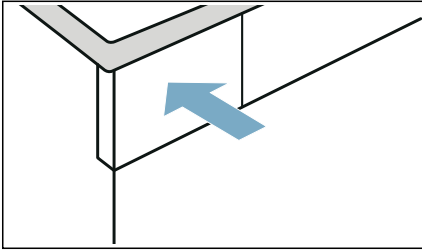


9. on **Start / reload** to press.
Device care starts and a signal sounds.

After about 3 hours, the appliance pauses appliance maintenance and the remaining program duration flashes in the display.

10. Pull out the condensate container horizontally and empty it.

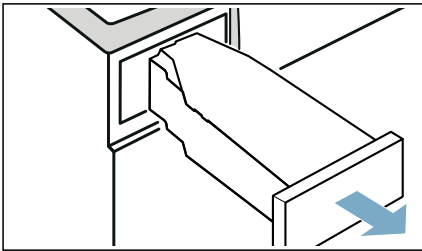


11. Fill approx. 1 ^ liter of warm tap water into the condensation container.

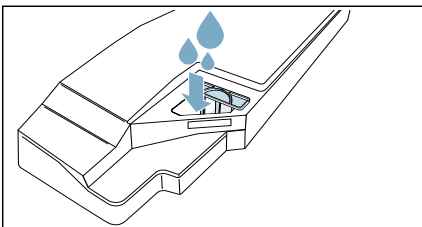


A notice: Always hold the filled condensation container horizontally so that no liquid leaks out.

12thCarefully swivel the condensate container horizontally and empty it to rinse out any residues of the original care product.

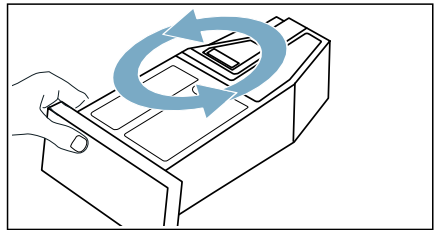

13thFill approx. 1 ^ liter of warm tap water into the condensate container again.


14thPush in the condensation container until it clicks into place.

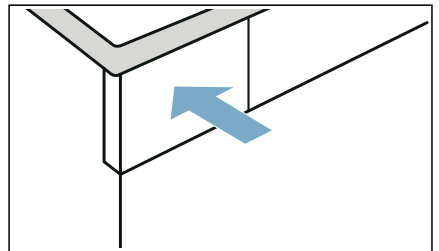


15thon **Start / reload** to press.
Device maintenance is continued. Appears in the display“ÿš at the end of the device maintenance and a signal sounds.

16.Empty the condensate container again.

17th Push in the condensation container until it clicks into place.

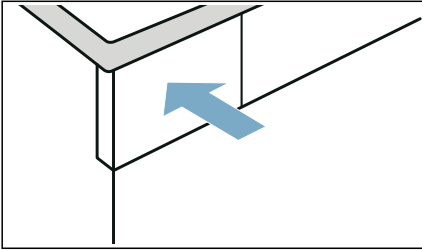

18th Press # to switch off the device.

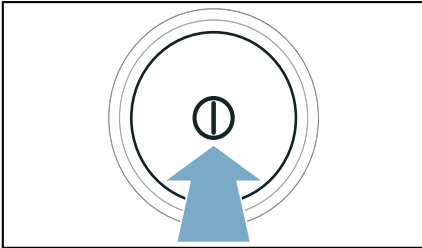

You have carried out device maintenance.

3 Device help

Description	Cause / remedy
Device does not start	Check the power plug and the fuses.
The device does not respond to $\text{ç}, \text{§}$ and the display shows:	<p>A dirty or damp fluff filter can impair the airflow in the device at low ambient temperatures.</p> <ul style="list-style-type: none"> - Clean the base unit and dry the fluff filter thoroughly. <i>~ Page 38</i> - Switch the device off and on. on Start / reload - Press to start the program again.
Wrinkling.	<ul style="list-style-type: none"> ■ Load exceeded or wrong program selected for a type of fabric. You will find all the information you need in the program table. <i>~ Page 21</i> ■ Take the laundry out of the drum as soon as it is dry. Lying in the drum causes creases.
Water comes out.	<ul style="list-style-type: none"> ■ The device could be at an angle. Align the device. Make sure that in the base unit: <ul style="list-style-type: none"> - the heat exchanger cover is locked correctly. - the seal of the heat exchanger cover is not contaminated. ~ Page 38 ■ If the optional drain hose * is installed, make sure the drain hose is connected properly.
The machine is paused, but the drum is rotating.	The device has detected a high temperature and started the CoolDown process. The temperature regulation can last up to 10 minutes. You can cancel the CoolDown process at any time by opening the door.
Program does not start	<p>Make sure, that</p> <ul style="list-style-type: none"> ■ the door is closed, the child safety device is ■ 3 seconds.w is deactivated Start / Reload ■ was pressed <p>A notice: Is a program delay throughM. Completed inN If this is set, the program will start at a later point in time.</p>
Displayed program duration changes during dry washing operation.	No mistake. The moisture sensor determines the residual moisture in the changes during dry washing and adapts the program duration (except time programs).

Laundry does not dry properly or is still too damp.

- At the end of the program, warm laundry feels more humid than it actually is. Spread out the laundry and let it cool down. Adjust the dryness level or increase the level of dryness. This extends the drying time while maintaining the same temperature.
- Select the time program for drying laundry that is still damp. Select the time program for a small load.
- Maximum load of a program is not exceeded. ~ *Page 21*
- Clean the moisture sensor in the drum. A fine layer of lime or residues from detergents and care products can be deposited on the sensor and its function affect. ~ *Page 41*
- Drying was interrupted by a power failure, a full condensation container or by exceeding the maximum drying time.

A notice: Also note the tips on washing. ~ *Page 25*

Drying time too long.

- The appliance can be soiled with lint. This causes a longer drying time.
 - Clean the base unit. ~ *Page 38*
 - Complete drying with laundry that has not been pre-dried and a load of more than 3 kg.

A notice: The machine's automatic self-cleaning system uses condensation from your laundry. If you permanently dry loads of less than 3 kg, the condensation water in your laundry will not be sufficient for the appliance to automatically clean itself. Regularly dry laundry that has not been pre-dried with a load of more than 3 kg.

- The heat exchanger can be contaminated with lint.
 - Carry out simple device care. ~ *Page 43*
- A damp fluff filter can extend the drying time and affect the drying result. Thoroughly dry the lint filter of the floor unit after rinsing it. ~ *Page 38*
- A blocked or not freely accessible air inlet on the device can extend the drying time. Keep the air inlet free.
- An ambient temperature lower than 15 ° C and higher than 30 ° C can extend the drying time and affect the drying result.
- Insufficient air circulation in the room can increase the drying time. Ventilate the room adequately.

Odor build-up in the device

Carry out intensive device care. ~ *Page 44*

Humidity in the room increases.

Ventilate the room sufficiently.

Unfamiliar noises when drying.

During the drying process, operational noises are produced by the pump and the compressor. These do not indicate a malfunction of the device.

The device feels cold despite drying.

No mistake. The device with heat pump dries efficiently at low temperatures.

Drying program canceled.	If the drying program is interrupted due to a power failure, start the program again or remove the laundry and spread it out.
Connection to the home network is not established.	<ul style="list-style-type: none">■ Wi-Fi is turned off. To connect to the home network, switch on Wi-Fi. † must appear in the display.■ Wi-Fi is turned on, but the connection to the home network cannot be established. Check whether the home network is available or reconnect to the home network.
Home Connect does not work.	<ul style="list-style-type: none">■ If you have problems with Home Connect, you can find help at www.home-connect.com.■ Whether you can use the Home Connect functions on your device depends on the availability of the Home Connect service (eg the availability of the app) in your country. The Home Connect service is not available in every country; you can find information on this at www.home-connect.com.
Residual water in the condensate container, although the drain hose * is connected to the device.	If the optional drainage hose * is installed, some residual water will remain in the condensate container due to the self-cleaning function of the device.

* depending on the equipment or available accessories

A notice: If you cannot rectify a fault yourself by switching the device off and on, contact customer service. ~ Page 54

L.Transporting the device

warning

Risk of injury / damage to property and equipment!

If the appliance is lifted or pushed using protruding components (eg appliance door), the components can break off and cause injuries. Do not move the device by protruding parts.

⚠warning

Risk of injury!

- You could injure yourself when lifting the device from the heavy weight.


Do not lift the device alone.

- You could cut your hands on the sharp edges of the device.


Do not take hold of the device by the sharp edges and use protective gloves.

Prepare the device for transport as follows:

1. Pull out the condensate container horizontally and empty it.

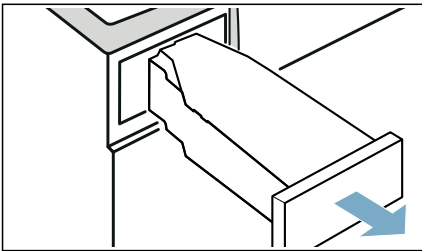

2. Push the condensation container back into the device until you feel it click into place.

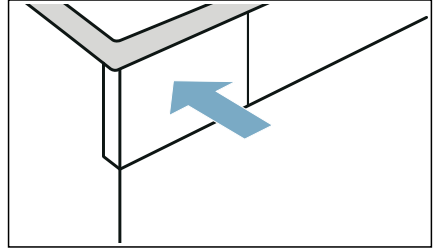

3. Turn on a device.
- 4th Set any program.
5. on **Start / reload** to press.
- 6th Wait 5 minutes. Condensation water is pumped out.
- 7th Empty the condensate container again.

8th. Switch off the device.

9. Disconnect the device's power plug from the mains.

The device is now ready for transport.

Caution!

Property and equipment damage

Despite pumping out, there is always some residual water in the device. Residual water can leak and cause property damage.

Transport the device upright.

[Consumption values

Consumption value table

program	The speed at which the laundry is spun	Duration**		Power consumption**	
	became (in rpm)	(in min)	(in min)	(in kWh)	(in kWh)
cotton		8 kg	4 kg	8 kg	4 kg
Cupboard dry »*	1400	172	111	1.22	0.72
	1000	192	122	1.44	0.83
	800	212	133	1.66	0.94
Iron dryO*	1400	132	82	0.88	0.52
	1000	152	93	1.10	0.63
	800	172	104	1.32	0.74
Easy-care		3.5 kg		3.5 kg	
Cupboard dry »*	800	77		0.44	
	600	87		0.53	

* Program setting for tests according to the valid EN61121.
 * * Depending on the type of textile, the composition of the laundry to be dried, the residual moisture in the textile, the degree of dryness set, the load quantity, the ambient conditions and when additional functions are activated, the values may differ from the stated values.

Most efficient program for cotton fabrics

The following “standard cotton program” (marked byü) is suitable for drying normally wet cotton laundry and is most efficient in terms of combined energy consumption for drying wet cotton laundry.

Standard programs for cotton in accordance with the current EU regulation 932/2012		
Program + drying level	loading (in kg)	Energy consumption program duration (in kWh) (in min)
üCotton + cupboard dry »	8/4	1.44 / 0.83 192/122

Program setting for tests and energy labeling in accordance with Directive 2010/30 / EU.

{Technical specifications

Dimensions:

850 x 600 x 640 mm
(height x width x depth)

Weight:

56 kg (depending on the model)

Mains connection:

Mains voltage 220 - 240 V, 50 Hz

nominal current 10 A.

Nominal power 600 W.

Maximum load:

8 kg

Power consumption when switched off:

0.10 W

Power consumption when not switched off:

0.10 W

Drum interior lighting *

Ambient temperature **

5 - 35 ° C

Power consumption in networked (Wi-Fi) standby mode / duration:

1.2 W / 20 min

* depending on the equipment

** When the ambient temperature is below 10 ° C, the function **Remote start** as well as the maximum duration of 24 hours for the function M. **Completed inN** to be disabled.

) disposal

Dispose of packaging and device in an environmentally friendly manner. This appliance is labeled in accordance with European Directive 2012/19 / EU on old electrical and electronic equipment (waste electrical and electronic equipment - WEEE). The guideline provides the framework for the return and recycling of old devices, which is valid across the EU.

Caution!

Risk of fire / risk of poisoning / damage to property and equipment

The device contains the environmentally friendly but flammable refrigerant R290. Incorrect disposal can lead to fire and poisoning.

Dispose of the device properly and do not damage the pipes of the refrigerant circuit.

4th Customer service

If you cannot rectify a fault yourself by switching the device off and on, please contact customer service. ~ Enclosed customer service list or Back cover

We always find a suitable solution, also to avoid unnecessary visits by technicians.

Please provide customer service with the product number (E no.) And the production number (FD) of the device.

_____	_____
-------	-------

E no.	Product number
FD	Production number

You will find this information * depending on the model:

inside the door * / open service flap * and on the back of the device.

Trust in the competence of the manufacturer.

Apply to us. In this way, you ensure that the repair is carried out by trained service technicians using the original spare parts.

Repair order and advice in the event of malfunctions

D. 089 21 751 751

A. 0810 550 522

CH 0848 840 040

The contact details for all countries can be found in the enclosed customer service directory.

BSH Hausgeräte GmbH

Carl-Wery-Strasse 34

81739 Munich

GERMANY

siemens-home.bsh-group.com

* 9001437062 *

9001437062 (9907)